

Table of Contents

List of Figures	iii
List of Tables	iv
Safety Summary	v

General Information

General Information	1-1
Plug-in to Mainframe Compatibility	1-1
Installing and Removing the Plug-in	1-2
Instrument Options	1-3
Packaging for Shipment	1-3
Operating Environment	1-4

Checks and Adjustments

Checks and Adjustments	2-1
Test Equipment	2-3
Using These Procedures	2-6
Conventions in this Manual	2-6
Initialized Setting	2-6
Menu Selections and Measurement Techniques	2-6
Procedure 1 Initial Setup	2-7
Procedure 2 Enhanced Accuracy	2-8
Procedure 3a High Frequency Response: Standard Procedure	2-9
Procedure 3b High Frequency Response: Alternate Procedure	2-20
Procedure 4 Overload	2-29
Procedure 5 Input Resistance	2-30
Procedure 6 Vertical Accuracy	2-31
Procedure 7 Bandwidth Limit	2-33
Procedure 8 AC Coupling	2-35
Procedure 9 DC Balance	2-37
Procedure 10a ΔV DC Accuracy: 11400-Series Mainframe Procedure	2-39
Procedure 10b ΔV DC Accuracy: 11300-Series Mainframe Procedure	2-43
Procedure 11 DC Offset Accuracy	2-47

Maintenance

Maintenance	3-1
Preventive Maintenance	3-1
Amplifier Shield Removal	3-1
Cleaning	3-1
Visual Inspection	3-2
Periodic Electrical Adjustment	3-2

Corrective Maintenance	3-3
Ordering Parts	3-3
Static-Sensitive Device Classification	3-3
Removing and Replacing FRUs	3-4
Removing/Replacing FRU ICs	3-6
Removing/Replacing U310/U410 Hypcon Assemblies	3-8
Circuit Board and Attenuator FRU Removal	3-14
Programming the Unit Identification	3-18
BNC Connectors	3-19
Multi-Pin Connectors	3-20
Diagnostic Troubleshooting	3-21
Diagnostics Overview	3-21
New Configuration Calibration	3-25
Restoring Calibration Data	3-25
Amplifier Memory Backup Power	3-25
Field Replaceable Unit (FRU) Guide	3-26
Fuse Troubleshooting	3-29
Jumpers	3-30

Theory of Operation

Theory of Operation	4-1
Block Diagram Description	4-1
Signal Flow	4-1
Control Flow	4-3
Power	4-3

Replaceable Parts

Replaceable Parts	5-1
Parts Ordering Information	5-1
Using the Replaceable Parts List	5-2

List of Figures

Figure 1-1: Installing the 11A52 Amplifier in a Mainframe	1-3
Figure 2-1: A1 Main Board Adjustment Locations	2-16
Figure 2-2: 11400-Series A6 Time Base Board CAL-LOCK Pin Locations	2-16
Figure 2-3: 11300-Series A11 Main Processor Board Switch Location	2-24
Figure 2-4: Waveform with AC Coupling Selected	2-36
Figure 3-1: Field Replaceable Units (FRU) Locator and A1 Main Board Securing Hardware	3-5
Figure 3-2: Semiconductor Indexing Diagram	3-7
Figure 3-3: Hypcon Assembly Removal and Replacement	3-9
Figure 3-4: IC Insertion-Extraction Pliers	3-13
Figure 3-5: Location of Screws and Parts for Removal of an Attenuator	3-16
Figure 3-6: Location of a Nut Block Securing the Circuit Board to the Frame Section	3-17
Figure 3-7: Indexing of Multi-pin Connectors	3-20
Figure 3-8: Sample LED Fault Code Timing Diagram	3-22
Figure 4-1: 11A52 Two-Channel Amplifier Block Diagram	4-2
Figure 5-1: Exploded View of the 11A52 Two-Channel Amplifier ...	5-6

List of Tables

Table 2-1: Measurement Limits, Specifications, Adjustments, and Functional Test	2-1
Table 2-2: Test Equipment	2-3
Table 2-3: Deflection Factors and Associated Test Conditions	2-15
Table 2-4: 11A52 Amplifier Commands (11400 Series)	2-15
Table 2-5: 11A52 Amplifier Bandwidth	2-18
Table 2-6: Deflection Factors and Associated Test Conditions	2-25
Table 2-7: 11A52 Amplifier Commands (11300 Series)	2-25
Table 2-8: 11A52 Amplifier Bandwidth	2-27
Table 2-9: 11A52 Amplifier DC Balance Table	2-38
Table 2-10: 11A52 Amplifier DC Offset Accuracy	2-51
Table 3-1: Relative Susceptibility to Damage from Static Discharge	3-4
Table 3-2: Board FRU	3-26
Table 3-3: Component/Module FRUs	3-26
Table 3-4: Amplifier Kernel Error Index Codes	3-27
Table 3-5: Self-Tests and Extended Diagnostics Error Index Codes	3-27
Table 3-6: Self-Tests and Extended Diagnostics Error Index Codes	3-28