

5314A UNIVERSAL COUNTER

OPERATING AND SERVICE MANUAL

SERIAL NUMBER PREFIX: 1828A

This manual applies directly to HP Model 5314A having serial number prefix 1828A and below.

NEWER INSTRUMENTS

This manual, with enclosed "Manual Changes" sheet, applies to HP Model 5314A having serial number prefixes as listed on the "Manual Changes" sheets.

Copyright HEWLETT-PACKARD COMPANY 1978
5301 STEVENS CREEK BLVD., SANTA CLARA, CALIF. 95050

MANUAL PART NUMBER 05314-90001
Microfiche Part Number 05314-90002

Printed: SEPT 1978

HEWLETT  PACKARD

TABLE OF CONTENTS

Section		Page
I	GENERAL INFORMATION	1-1
	1-1. Introduction	1-1
	1-4. Specifications	1-1
	1-6. Safety Considerations	1-1
	1-8. Instruments Covered by Manual	1-1
	1-11. Instrument Identification	1-1
	1-15. Description	1-3
	1-18. Options	1-3
	1-20. Equipment Supplied	1-4
	1-22. Recommended Test Equipment	1-4
II	INSTALLATION	2-1
	2-1. Introduction	2-1
	2-3. Initial Inspection	2-1
	2-5. Preparation for Use	2-1
	2-6. Power Requirements	2-1
	2-8. Line Voltage Selection	2-1
	2-10. Power Cable	2-2
	2-12. Bench Operation	2-3
	2-14. Installation of Options 001 and 002	2-3
	2-16. Operating Environment	2-3
	2-18. Storage and Shipment	2-3
	2-19. Environment	2-3
	2-21. Packaging	2-3
III	OPERATION	3-1
	3-1. Introduction	3-1
	3-3. Operating Characteristics	3-1
	3-5. Frequency Measurements	3-1
	3-7. Period Measurements	3-1
	3-9. Time Interval Measurements	3-1
	3-12. Ratio A/B Measurements	3-2
	3-14. Totalize A Measurements	3-2
	3-16. Self-Check	3-2
	3-18. Panel Features	3-2
	3-20. Operating Instructions	3-3
	3-22. Operator's Maintenance	3-3
	3-24. Power/Warm-Up	3-3
IV	PERFORMANCE TESTS	4-1
	4-1. Introduction	4-1
	4-3. Equipment Required	4-1
	4-5. Operation Verification	4-1
	4-7. Performance Test	4-1
	4-9. Test Record	4-1

TABLE OF CONTENTS (Continued)

Section		Page
V	ADJUSTMENTS	5-1
	5-1. Introduction	5-1
	5-4. Equipment Required	5-1
	5-6. Adjustment Locations	5-1
	5-8. Safety Considerations	5-1
VI	REPLACEABLE PARTS	6-1
	6-1. Abbreviations	6-1
	6-5. Replaceable Parts List	6-1
	6-9. Ordering Information	6-1
	6-12. Parts Provisioning	6-2
	6-14. Direct Mail Order System	6-2
VII	MANUAL CHANGES	7-1
	7-1. Introduction	7-1
	7-3. Manual Changes	7-1
	7-5. Series 1816A	7-1
VIII	SERVICE	8-1
	8-1. Introduction	8-1
	8-3. Theory of Operation	8-1
	8-5. Troubleshooting	8-1
	8-7. Recommended Test Equipment	8-1
	8-9. Schematic Diagram Notes	8-1
	8-11. Reference Designations	8-1
	8-13. Identification Markings on Printed Circuit Boards	8-2
	8-16. Safety Considerations	8-2
	8-20. Fuse Replacement	8-3
	8-22. Line Input Fuse Replacement	8-3
	8-24. Option 002 Fuse Replacement	8-3
	8-26. Theory of Operation	8-5
	8-27. Introduction	8-5
	8-29. HP 5314A Overall Block Theory of Operation	8-5
	8-31. Detailed A1 Assembly Theory	8-5
	8-45. Power Supply Block Theory	8-12
	8-47. Detailed A2 Assembly Theory	8-12
	8-50. Option 002 Battery Charger Block Theory	8-12
	8-52. Detailed Option 002 A2 Assembly Theory	8-14
	8-56. Troubleshooting Test Procedures	8-14
	8-59. Procedure #1: Testing of 5314A Power Supply	8-16
	8-61. Procedure #2: Testing of 5314A Reference Oscillator	8-16
	8-63. Procedure #3: Testing Input Channels	8-17
	8-65. Procedure #4: Testing of ICM 7226 (Counter-in-a-Chip) and Display	8-20
	8-67. Procedure #5: 20 MHz Mode	8-20

LIST OF TABLES

Table		Page
1-1.	Specifications	1-2
1-2.	Equipment Supplied	1-4
1-3.	Recommended Test Equipment	1-4
2-1.	Line Voltage Changing Procedure	2-2
2-2.	Option 001 Installation Instructions	2-4
2-3.	Option 002 Installation Instructions	2-6
5-1.	Input Line Voltage Adjustment	5-2
5-2.	Time Base Frequency Adjustment	5-2
5-3.	Option 001 Adjustment	5-4
5-4.	Option 002 Charge Cutoff Voltage Adjustment	5-6
6-1.	Reference Designations and Abbreviations	6-2
6-2.	Replaceable Parts	6-4
6-3.	Manufacturers Code List	6-9
8-1.	Assembly Designations	8-2
8-2.	Function/Range versus Digit Drive	8-8
8-3.	Useful Resolution Switch Positions	8-10
8-4.	Option 002 Power Switch Operation	8-12
8-5.	Block Diagram Sections versus Test Procedures	8-14
8-6.	A1 Test Point Signal Descriptions	8-16
8-7.	Multiplexed Digit Driver Output	8-20