

TABLE OF CONTENTS

Section	Title	Page
I	GENERAL INFORMATION	1-1
	1-1. Introduction	1-1
	1-2. Manual Summary	1-1
	1-5. Specifications	1-1
	1-7. Safety Considerations	1-1
	1-10. Description	1-1
	1-27. Options	1-2
	1-33. Instrument Identification	1-2
	1-35. Accessories	1-2
	1-39. Recommended Test Equipment	1-2
II	INSTALLATION	2-1
	2-1. Introduction	2-1
	2-3. Unpacking and Inspection	2-1
	2-5. Preparation for Use	2-1
	2-6. Power Requirements	2-1
	2-8. Line Voltage Selection	2-1
	2-10. AC Line Fuse Selection	2-1
	2-12. DC Fuse Selection	2-1
	2-15. Power Cable	2-1
	2-17. HP-IB Interconnections	2-2
	2-21. HP-IB Talk/Listen Address Switch	2-2
	2-23. HP-IB Description	2-4
	2-25. HP-IL Interconnections (Option 003)	2-4
	2-27. HP-IB Description	2-4
	2-29. Channel B Input Fuse	2-4
	2-31. Operating Environment	2-4
	2-35. Storage and Shipment	2-4
	2-36. Environment	2-4
	2-39. Packaging	2-5
	2-42. Where to Ship Your Unit for Repair	2-5
	2-44. Field Installation of Options	2-6
	2-48. Option 001 (TCXO) Installation	2-6
	2-50. Option 003 HP-IL Installation	2-6
	2-52. Option 004 Oven Oscillator Installation	2-7
	2-54. Option 005 Battery Pack Installation	2-7
III	OPERATION AND PROGRAMMING	3-1
	3-1. Introduction	3-1
	3-3. Operating Characteristics	3-1
	3-6. Operating Instructions	3-1
	3-10. Operator's Maintenance	3-1
	3-13. General Operation Information	3-1
	3-14. Introduction	3-1
	3-16. Display	3-1
	3-19. Keyboard	3-2
	3-22. Inputs	3-2
	3-24. Power-Up/Self-Check	3-2
	3-28. Error Messages	3-2
	3-35. Front Panel Features	3-3
	3-38. ON-STBY	3-3

TABLE OF CONTENTS (Continued)

Section	Title	Page
III	OPERATION AND PROGRAMMING (Continued)	
3-40.	A Channel	3-3
3-50.	B Channel and A&B	3-4
3-56.	Gate and Display Digits	3-4
3-67.	Reset/Local and Check	3-5
3-73.	Inputs	3-6
3-81.	Rear Panel Features	3-6
3-91.	External DC Operation	3-7
3-93.	Making Frequency and Period Measurements	3-7
3-95.	Remote Programming	3-11
3-96.	Introduction	3-11
3-101.	Interface Description	3-11
3-102.	Hewlett-Packard Interface Bus (HP-IB)	3-11
3-104.	Hewlett-Packard Interface Loop (HP-IL)	3-11
3-107.	Interface Functional Overview	3-12
3-111.	Interface Systems Terms	3-12
3-113.	Address Selection	3-12
3-118.	Interface Commands	3-13
3-121.	Interface Capabilities	3-14
3-125.	Meta Messages	3-14
3-130.	SRQ, SRQ Mask, and Status Byte	3-15
3-131.	SRQ and Status Byte	3-15
3-136.	Service Request Mask	3-16
3-138.	Device Dependent Commands	3-16
3-140.	Output Formats	3-16
3-143.	Numeric Entry	3-17
3-147.	IN Initialize	3-17
3-149.	WA0 and WA1 Wait to Send Mode Off/On	3-17
3-152.	DR (string) Remote Display	3-18
3-159.	DL Display Local	3-18
3-161.	ID and SI Send Device ID	3-18
3-163.	SE Send Error	3-18
3-165.	LCD Character Set	3-18
3-167.	Program Examples	3-18
IV	PERFORMANCE TESTING	4-1
4-1.	Introduction	4-1
4-3.	Equipment Required	4-1
4-5.	Test Record	4-1
4-7.	Error Messages	4-1
4-9.	Performance Test	4-1
V	ADJUSTMENTS	5-1
5-1.	Introduction	5-1
5-4.	Equipment Required	5-1
5-6.	Adjustment Locations	5-1
5-8.	Safety Considerations	5-1
5-10.	HP 5384A/HP 5385A Adjustment Procedures	5-1
5-11.	HP 5384A/HP 5385A +3 Volt DC Adjustment Procedure	5-1
5-13.	HP 5384A/HP 5385A Channel A Input Amplifier Adjustment Procedure	5-2

TABLE OF CONTENTS (Continued)

Section	Title	Page
IV	ADJUSTMENTS (Continued)	
5-15.	HP 5384A Channel B Input Amplifier Adjustment Procedure	5-3
5-17.	HP 5385A Channel B Input Amplifier Adjustment Procedure	5-3
5-19.	Standard Oscillator Adjustment Procedures	5-5
5-21.	TCXO Adjustment Procedure	5-5
5-25.	Oven Oscillator Adjustment Procedure	5-7
5-26.	HP 5384A/HP 5385A Battery Charger Adjustment Procedure	5-7
VI	REPLACEABLE PARTS	6-1
6-1.	Introduction	6-1
6-3.	Abbreviations	6-1
6-5.	Replaceable Parts Lists	6-1
6-9.	Ordering Information	6-1
6-12.	Direct Mail Order System	6-1
VII	MANUAL CHANGES	7-1
7-1.	Introduction	7-1
7-3.	Manual Changes	7-1
VIII	SERVICE	8-1
8-1.	Introduction	8-1
8-3.	Schematic Diagram Symbols and Reference Designators	8-1
8-5.	Reference Designations	8-1
8-7.	Identification Markings on Printed Circuit Boards	8-1
8-11.	Safety Considerations	8-2
8-16.	Safety Symbols	8-2
8-18.	Recommended Test Equipment	8-2
8-20.	Service Aids	8-2
8-21.	Pozidriv Screwdrivers	8-2
8-23.	Nut Drivers	8-2
8-25.	Service Aids on Printed Circuit Boards	8-3
8-27.	After Service Safety Checks	8-3
8-32.	HP 5384A and HP 5385A Disassembly Procedures	8-3
8-35.	Assembly Identification	8-3
8-37.	Logic Symbols	8-5
8-39.	Explanation of New Logic Symbols	8-5
8-40.	Introduction	8-5
8-45.	Symbol Composition	8-5
8-52.	Qualifying Symbols	8-7
8-65.	Dependency Notation	8-10
8-125.	Bistable Elements	8-17
8-129.	Coders	8-18
8-137.	Use of Binary Grouping to Produce Affecting Inputs	8-19
8-139.	Sequence of Input Labels	8-20
8-144.	Sequence of Output Labels	8-20
8-151.	Theory of Operation	8-21
8-152.	Overall Counter Operation	8-21
8-167.	Signal Descriptions	8-23

TABLE OF CONTENTS (Continued)

Section	Title	Page
VIII	SERVICE (Continued)	
8-169.	Detailed Theory of Operation	8-23
8-177.	HP 5384A Channel B	8-24
8-182.	HP 5385A Channel B	8-25
8-193.	HP 3870 Microcomputer	8-25
8-200.	Interpolator Technique	8-26
8-207.	HP-IB	8-27
8-213.	HP-IL	8-28
8-230.	Power Supply	8-30
8-246.	Battery Pack Charger	8-31
8-258.	Troubleshooting	8-32
8-259.	Introduction	8-32
8-263.	Built-In Diagnostics	8-33
8-265.	Accessing the Built-In Diagnostics	8-33
8-269.	Power-Up Self-Check	8-33
8-272.	CPU Check	8-33
8-275.	I/O Address	8-33
8-278.	Interpolator, Long and Short Calibration	8-34
8-283.	Microprocessor Port Check	8-34
8-286.	Manual Troubleshooting	8-34
8-288.	Power Supply Troubleshooting	8-35
8-289.	Oscillator Troubleshooting	8-35
8-293.	Input Amplifier Troubleshooting	8-36
8-301.	Battery Pack Troubleshooting	8-41
8-303.	Battery Charger Board Troubleshooting	8-41
8-309.	Battery Load Current Test	8-41
8-311.	Shut-Down Voltage Test	8-42
8-313.	Battery Tests	8-42
8-315.	Charge State	8-42
8-318.	Capacity Test	8-42
8-320.	HP-IB Interface Assembly (A5 Board) Troubleshooting	8-43

LIST OF TABLES

Title	Title	Page
1-1.	Models HP 5384A and HP 5385A Specifications	1-3
1-2.	Recommended Test Equipment	1-5
2-1.	HP-IB Cable Descriptions	2-2
2-2.	HP-IL Cable Descriptions	2-4
3-1.	Power-Up Initialize States	3-2
3-2.	Error Messages	3-3
3-3.	Units Display Format	3-7
3-4.	Address Selection	3-13
3-5.	Interface Capabilities	3-14
3-6.	Meta Messages	3-15
3-7.	Meta Messages and Controller Commands	3-15
3-8.	HP 5384A and HP 5385A Status Byte	3-16
3-9.	Instrument Command Set	3-17
3-10.	LCD Character Set	3-25
4-1.	Performance Test	4-1
5-1.	Adjustments	5-1
5-2.	Approximate Offset Determination Table	5-6
6-1.	Abbreviations and Reference Designations	6-2
6-2.	HP 5384A Replaceable Parts	6-3
6-3.	HP 5384A with TCXO Replaceable Parts	6-8
6-4.	HP 5384A with Oven Oscillator Replaceable Parts	6-13
6-5.	Front Panel Display Assembly Replaceable Parts	6-18
6-6.	Battery Pack Replaceable Parts	6-19
6-7.	HP-IL Replaceable Parts	6-20
6-8.	HP-IB Replaceable Parts	6-21
6-9.	HP 5385A Replaceable Parts	6-22
6-10.	HP 5385A with Oven Oscillator Replaceable Parts	6-28
6-11.	Manufacturers Code List	6-33
6-12.	HP 5384A Replaceable Mechanical Parts	6-34
6-12.	HP 5385A Replaceable Mechanical Parts	6-36
7-1.	Manual Backdating	7-1
8-1.	Assembly Usage	8-3
8-2.	General Qualifying Symbols	8-6
8-3.	Qualifying Symbols for Inputs and Outputs	8-7
8-4.	Symbols Inside the Outline	8-9
8-5.	Summary of Dependency Notation	8-10
8-6.	Signal Descriptions	8-23
8-7.	Power Supplies and Associated Assemblies	8-35
8-8.	Battery Pack Troubleshooting	8-41
8-9.	Battery State-of-Charge	8-43

LIST OF FIGURES

Figure	Title	Page
1-1.	Models HP 5384A and HP 5385A Frequency Counters and Accessories	1-0
2-1.	Line Voltage Selection	2-1
2-2.	Power Cable HP Part Number versus Mains Plugs Available	2-2
2-3.	Hewlett-Packard Interface Bus Connections	2-3
2-4.	Typical HP-IL Interface Connection	2-4
2-5.	Details of Input Connector J2 and Fuse Mounting	2-5
3-1.	Front Panel ON/STBY Switch	3-3
3-2.	Front Panel A Channel Function Keys	3-3
3-3.	Front Panel B and A&B Function Keys	3-4
3-4.	Front Panel Gate Selection Display Digits Keys	3-5
3-5.	Front Panel Reset/Local and Check Keys	3-5
3-6.	Front Panel Inputs Section	3-6
3-7.	Front Panel Indicators	3-8
3-8.	Front Panel Controls	3-9
3-9.	Rear Panel Features	3-10
3-10.	HP 5384A and HP 5385A Address Switches Shown in Address 31	3-12
3-11.	Typical HP-IL System Addressing	3-13
3-12.	Example 5 Set-Up	3-22
5-1.	Assembly Adjustment Locator	5-2
5-2.	Channel A Input Amplifier Adjustment Setup	5-3
5-3.	Input Amplifier Adjustment Waveform	5-3
5-4.	HP 5384A Channel B Input Amplifier Adjustment Setup	5-4
5-5.	HP 5385A Channel B Input Amplifier Adjustment Setup	5-4
5-6.	Standard, TCXO and Oven Oscillator Test Setup	5-5
5-7.	TCXO and Standard Oscillator Adjustment	5-6
5-8.	Standard Oscillator Coarse and Fine Adjustment Location	5-6
5-9.	Fast Charge Current Adjustment Setup	5-7
5-10.	Fast Charge Threshold Adjustment Setup	5-8
6-1.	HP 5384A Exploded View	6-35
6-2.	HP 5385A Exploded View	6-37
8-1.	Schematic Diagram Notes	8-4
8-2.	Test Setup for A3C37 and C23 Selection	8-5
8-3.	Illustration of Common-Control Block	8-6
8-4.	Illustration of Common-Output Element	8-6
8-5.	G Dependency Between Inputs	8-11
8-6.	G Dependency Between Outputs and Inputs	8-11
8-7.	G Dependency with A Dynamic Input	8-11
8-8.	OR'ed Affecting Inputs	8-12
8-9.	Substitution for Numbers	8-12
8-10.	V (OR) Dependency	8-12
8-11.	N (Negate, X-OR) Dependency	8-12
8-12.	Z (Interconnection) Dependency	8-13
8-13.	X (Transmission) Dependency	8-14
8-14.	C (Control) Dependency	8-14

LIST OF FIGURES (Continued)

Figure	Title	Page
8-15.	S (Set) and R (Reset) Dependencies	8-14
8-16.	EN (Enable) Dependency	8-15
8-17.	M (Mode) Dependency	8-15
8-18.	Type of Flip-Flop Determined by Mode	8-16
8-19.	Disabling an Output of the Common Control Block	8-16
8-20.	Determining an Output Function	8-16
8-21.	Dependent Relationship Affected by Mode	8-16
8-22.	A (Address) Dependency	8-17
8-23.	RAM Example	8-17
8-24.	Four Types of Bistable Circuits	8-18
8-25.	Code General Symbol	8-18
8-26.	An X-Y Code Converter	8-18
8-27.	An X-Octal Code Converter	8-19
8-28.	Coder Producing Several Dependencies	8-19
8-29.	Code Producing One Type of Dependency	8-19
8-30.	Use of Binary Grouping Symbol	8-19
8-31.	Input Lables	8-20
8-32.	Factoring Input Lables	8-20
8-33.	Placement of Three-State Symbols	8-20
8-34.	Output Labels	8-21
8-35.	Factoring Output Labels	8-21
8-36.	HP 5384A/HP 5385A Block Diagram	8-22
8-37.	Interpolator Timing Diagram	8-26
8-38.	Expanded Interpolator Error Pulse	8-26
8-39.	Short and Long Calibration Pulses Example	8-27
8-40.	Sample HP-IL Frame	8-29
8-41.	HP-IL Bit Encoding	8-29
8-42.	Open Circuit Output Waveform	8-30
8-43.	Standard Oscillator Waveform	8-35
8-44.	Option 001 (TCXO) Oscillator Waveform	8-36
8-45.	HP 5384A/HP 5385A Channel A Waveforms	8-37
8-46.	HP 5384A Channel B Waveforms	8-38
8-47.	HP 5385A Channel B Waveforms	8-40
8-48.	All Signatures for the HP 5384A and HP 8385A Motherboard	8-44
8-49.	Troubleshooting Flowchart	8-45
8-50.	HP 5384A A1 Motherboard Assembly (Sheet 1 of 2)	8-47
8-50.	HP 5384A A1 Motherboard Assembly (Sheet 2 of 2)	8-49
8-51.	HP 5385A A1 Motherboard Assembly (Sheet 1 of 2)	8-51
8-51.	HP 5385A A1 Motherboard Assembly (Sheet 2 of 2)	8-53
8-52.	A4 HP-IB Interface Assembly	8-55
8-53.	A5 HP-IL Interface Assembly	8-57
8-54.	A3 Battery Pack Assembly	8-59