

Table of Contents

List of Figures	ix
List of Tables	xiii
Safety Summary	xv

Specification

Specifications	1-1
----------------------	-----

Operating Information

Operating Information	2-1
Sampling Head Installation and Removal	2-2
Power Information	2-4
Power Cord Information	2-5
Memory Backup Power	2-6
Operating Environment	2-6
Operating Temperature	2-6
Ventilation Requirements	2-6
Packaging for Shipment	2-7

Theory of Operation

Theory of Operation	3-1
System Functional Overview	3-3
Acquisition System Block	3-3
Strobe Distribution Block	3-3
Time Base/Controller Block	3-3
Trigger Select Block	3-3
Executive Processor Block	3-4
Memory Management Unit Block	3-4
Waveform Memory Block	3-4
Front Panel Controls	3-5
I/O Block	3-5
Waveform Compressor and Display Control Block	3-5
Power Supply	3-6
Typical Waveform Processing Cycle	3-6

Block Diagram Descriptions	3-7
A1 M/F Strobe Drive Board	3-7
Data Buffers	3-7
Address Latch	3-7
Function Decoder	3-7
Internal Clock Rate Generator	3-7
Control Buffer	3-8
A3 M/F Power Connect Board	3-8
A4 Regulator Board	3-8
Voltage-Fault Detect	3-8
A5 Time Base/Controller Board	3-9
Microprocessor	3-9
RAM/ROM Memory	3-9
Trigger	3-9
Time Base	3-11
Acquisition System Interface	3-11
Memory Management Unit (MMU) Interface	3-12
A7 CRT Socket Board	3-12
Red, Green, and Blue Video Amplifiers	3-12
Red, Green, and Blue Adjustments	3-12
Convergence Adjustment	3-12
A8 CRT Driver Board	3-13
Horizontal Sweep	3-13
Vertical Sweep	3-13
High Voltage and Grid Voltage Generator	3-13
Degauss	3-14
Beam Current Limit	3-14
Grid Bias	3-14
A9, A10, and A11 Front Panel Boards	3-14
Touch Panel, Major Menu Keys, and Menu Status LEDs	3-14
A9 Touch Panel Assembly	3-14
A10 Front Panel Control Board	3-15
A11 Front Panel Button Board	3-15
A12 Rear Panel Assembly	3-16
GPIO Data and Address Bus	3-16
Standard RS-232-C Controller	3-17
Printer Port	3-17
A13 Mother Board	3-18
A14 Input/Output (I/O) Board	3-18
I/O Data Buffer	3-18
I/O Delayed Data Buffer	3-19
Timer Configuration	3-19
Real Time Clock	3-19
Serial Data Interface (SDI)	3-19
Tone Generator	3-19
Temp/Tone Readback Buffer	3-19

A15 Memory Management Unit (MMU) Board	3-20
MMU IC	3-20
Waveform RAM	3-20
Display Interface	3-20
Time Base/Controller Interface	3-21
Executive Processor (EXP) Interface	3-21
Display IC	3-21
Microprocessor	3-21
Bit Map RAM	3-21
Waveform Display RAM	3-22
Video Digital-to-Analog Converter (DAC)	3-22
A17 Executive Processor Board	3-22
Executive Processor (EXP)	3-22
Numeric Coprocessor	3-23
Bus Controller	3-23
Reset	3-23
Wait State	3-23
Interrupt Controllers	3-23
DMA Controller	3-23
A18 Memory Board	3-24
Address Latches	3-24
Address Decode and Memory Select	3-24
EPROMs, SRAM, and NVRAM	3-25
Memory Data Buffers	3-25
Wait State Generator	3-25
Wait State Diagnostics	3-25
Memory Configuration Readback	3-25
Battery Backup	3-26
A19 Strobe/TDR Buffer Board	3-26
Strobe Sense Select	3-26
Strobe Deskew	3-26
TDR Buffer and Level Shift	3-26
A20/A21 Head Interconnect (Power Only) Boards	3-27
A22/A23 Head Interconnect Boards	3-27
A26 M/F Acquisition Interconnect Board	3-27
A27 & A28 Acquisition System Boards	3-28
Programmable Gain Amplifiers	3-28
A/D Converters	3-28
Measurement Hardware	3-28
Timing and Sampling Head Control	3-29
Shared RAM	3-29
Time Base/Controller Interface	3-29
Microprocessor	3-30

Performance Verification

Performance Verification	4-1
Test Equipment	4-3
Test Record	4-6
Using These Procedures	4-11
Conventions in this Manual	4-11
Menu Selections and Measurement Techniques	4-11
User Manual	4-11
Performance Tests	4-13
Power-On Diagnostics	4-14
Diagnostics	4-15
Self-Test Diagnostics	4-15
Power-On Diagnostics Complete	4-16
Sampling Heads	4-17
Extended Diagnostics	4-19
Vertical Reference Voltage	4-21
Horizontal Reference Clock	4-23
Vertical Accuracy	4-25
System Vertical RMS Noise	4-31
Sweep Rate Accuracy	4-34
Triggering, External Direct	4-39
Prescaler Triggering	4-41
Internal Clock	4-43
Calibrator Output	4-45

Adjustment

Adjustments	5-1
Test Equipment	5-3
Using These Procedures	5-6
Conventions in this Manual	5-6
Menu Selections and Measurement Techniques	5-6
User Manual	5-6
Power Supply	5-7
Display	5-13
Real Time Clock	5-20

Maintenance

Preventive Maintenance	6-1
Removing the Cabinet Panel	6-1

Cleaning the Instrument	6-2
Exterior	6-2
CRT	6-2
Interior	6-3
Visual Inspection	6-3
Periodic Electrical Adjustment	6-3
Corrective Maintenance	6-5
Power Supply Voltage Hazard	6-5
Ordering Parts	6-5
Static-Sensitive Device Classification	6-6
Removing and Replacing FRUs	6-8
Electrical Lock-On of the Front Panel ON/STANDBY	
Power Switch	6-13
Power Supply Module Removal/Replacement	6-16
Fan Motor Removal/Replacement	6-19
Cathode Ray Tube (CRT) Removal/Replacement	6-20
Acquisition Unit Removal/ Replacement	6-26
Battery Disposal and First Aid	6-27
Battery Disposal	6-27
Emergency and First Aid Information	6-28
FRU Board and Assembly Removal	6-29
A1 M/F Strobe Drive Board	6-31
A3 M/F Power Connect Board	6-32
A4 Regulator Board	6-33
A5 Time Base/Controller Board	6-35
A7 CRT Socket Board and A8 CRT Driver Board	6-37
A9 Touch Panel Assembly	6-40
A10 Front Panel Control Board	6-42
A11 Front Panel Button Board	6-44
A12 Rear Panel Assembly	6-45
A13 Mother Board	6-47
A14 Input/Output (I/O) Board	6-49
A15 Memory Management Unit (MMU) Board	6-51
A17 Executive Processor (EXP) Board	6-53
A18 Memory Board	6-55
A19 Strobe/TDR Buffer Board	6-57
A20/A21 Head Interconnect (Power Only) and	
A22/A23 Head Interconnect Boards	6-59
A26 M/F Acquisition Interconnect Board	6-62
A27 Acquisition Analog Board	6-64
A28 Acquisition MPU Board	6-65
FRU IC Removal	6-66
Serial Data Interface Integrated Circuits ("Slam-Pack" ICs) ..	6-66
Firmware Integrated Circuits ("Dual In-Line Package" ICs) ..	6-69
Firmware Upgrade Procedure	6-69
Cables and Connectors	6-75

Interconnecting Pins	6-75
Coaxial-Type End-Lead Connectors	6-75
Multi-Pin Connectors	6-75
Checks After FRU Replacement	6-77
Diagnostic Troubleshooting	6-79
Diagnostics Overview	6-79
Kernel Diagnostics	6-80
Self-Test/Extended Diagnostics	6-81
Extended Diagnostics Menu Structure	6-81
Extended Diagnostics Error Index Codes	6-81
Diagnostic Menus	6-84
Diagnostic Menu Hardcopy	6-85
Diagnostic Terminal Mode (RS-232-C)	6-86
System Mode (GPIB & RS-232-C)	6-87
Battery Testing	6-89
Clearing NVRAM	6-90
Field Replaceable Unit (FRU) Guide	6-90
FRU Name Abbreviations	6-91
Component and Module Name Abbreviations	6-92
Executive Subsystem Error Codes	6-93
Display Subsystem Error Index Codes	6-97
Time Base Processor Error Index Codes	6-98
Acquisition Processor Error Index Codes	6-100
Other Troubleshooting	6-101
Power Supply Module	6-101
A4 Regulator Board	6-101
CRT, A7 CRT Socket Board, or A8 CRT Driver Board	6-102
A13 Mother Board	6-102
Fuse Testing	6-103
Time Base Calibration Errors	6-106
Acquisition Calibration Errors	6-108

Options

Options	7-1
Instrument Options	7-1
Power Cord Information	7-2

Electrical Parts List

Electrical Parts	8-1
-------------------------------	------------

Diagrams

Block Diagrams	9-1
System Block Diagram	9-2
Board Level Block Diagrams	9-9

Parts List

Replaceable Parts	10-1
Parts Ordering Information	10-1
Using the Replaceable Parts List	10-2

List of Figures

Figure 2-1: Sampling Head Compartments in the CSA 803A Communications Signal Analyzer	2-2
Figure 2-2: Power-Cord Plug Identification	2-5
Figure 3-1: Trigger Edge Slew Rate for High Frequency Selection ..	3-10
Figure 4-1: A26 M/F Acquisition Interconnect Board Test Point Locations	4-22
Figure 4-2: A5 Time Base/Controller Board Test Point Locations ...	4-24
Figure 5-1: A18 Memory Board Test Point Locations	5-8
Figure 5-2: A2A2 Control Rectifier Board Test Point and Adjustment Locations	5-10
Figure 5-3: A4 Regulator Board Test Point and Adjustment Locations	5-12
Figure 5-4: A8 CRT Driver Board Adjustment Locations	5-18
Figure 5-5: A7 CRT Socket Board Adjustment Locations	5-19
Figure 5-6: A14 I/O Board Test Point and Adjustment Locations	5-22
Figure 6-1: Field Replaceable Units (FRU) Locator	6-14
Figure 6-2: Removing the Power Supply Module, Fan Housing, and Rear Panel Connector Plate	6-16
Figure 6-3: A2A2 Control Rectifier Board Connector Locations	6-17
Figure 6-4: Removing/Replacing the CRT Cover	6-23
Figure 6-5: Removing/Replacing the Cathode Ray Tube	6-24
Figure 6-6: Removing/Replacing the CRT Torx Head Screws	6-25
Figure 6-7: Top View of the Card Cage	6-30
Figure 6-8: Removing/Replacing the A1 M/F Strobe Drive Board ...	6-31
Figure 6-9: Removing/Replacing the A4 Regulator Board	6-34
Figure 6-10: Removing/Replacing the A5 Time Base/Controller Board	6-36
Figure 6-11: Removing/Replacing the A7 CRT Socket Board	6-38
Figure 6-12: Removing/Replacing the A8 CRT Driver Board	6-39
Figure 6-13: A9 Touch Panel Assembly Torx Head Screws	6-41
Figure 6-14: Removing/Replacing the A9 Touch Panel Assembly ...	6-41
Figure 6-15: Removing/Replacing the A10 Front Panel Control Board	6-43
Figure 6-16: Removing/Replacing the A11 Front Panel Button Board	6-44
Figure 6-17: Removing/Replacing the A12 Rear Panel Assembly ...	6-46
Figure 6-18: Removing/Replacing the A13 Mother Board	6-48
Figure 6-19: Removing/Replacing the A14 I/O Board	6-50
Figure 6-20: Removing/Replacing the A15 MMU Board	6-52
Figure 6-21: Removing/Replacing the A17 Executive Processor Board	6-54
Figure 6-22: Removing/Replacing the A18 Memory Board	6-56

Figure 6-23: Removing/Replacing the A19 Strobe/TDR Buffer Board	6-58
Figure 6-24: Removing/Replacing the A20/A21 Head Interconnect (Power Only) and the A22/A23 Head Interconnect Boards	6-60
Figure 6-25: Removing/Replacing the Front Subpanel Assembly ...	6-61
Figure 6-26: Removing/Replacing the A26 M/F Acquisition Interconnect Board	6-62
Figure 6-27: Top View of the A26 Mainframe Acquisition Interconnect Board	6-63
Figure 6-28: Removing/Replacing the A27 Acquisition Analog Board	6-64
Figure 6-29: Removing/Replacing the A28 Acquisition MPU Board	6-65
Figure 6-30: FRU IC Detail	6-68
Figure 6-31: IC Insertion-Extraction Tool	6-71
Figure 6-32: Multi-Pin Connector Orientation and Semiconductor Indexing Diagram	6-74
Figure 6-33: A17 Executive Processor Board Test Point and Status LED Locations	6-94
Figure 6-34: A15 MMU Board Test Point and Status LED Locations	6-98
Figure 6-35: A5 Time Base/Controller Board Status LEDs	6-99
Figure 6-36: A28 Acquisition MPU Board Status LEDs	6-100
Figure 6-37: A14 I/O Board Fuse Locator Diagram	6-105
Figure 7-1: Power-Cord Plug Identification	7-2
Figure 9-1: CSA 803A System Functional Block Diagram	9-2
Figure 9-2: CSA 803A Detailed Block (Cabling) Diagram	9-3
Figure 9-3: A1 M/F Strobe Drive Board Block Diagram	9-9
Figure 9-4: A4 Regulator Board Block Diagram	9-10
Figure 9-5: A5 Time Base/Controller Board Block Diagram	9-11
Figure 9-6: A7 CRT Socket Board Block Diagram	9-11
Figure 9-7: A8 CRT Driver Board Block Diagram	9-12
Figure 9-8: A12 Rear Panel Assembly Block Diagram	9-13
Figure 9-9: A14 I/O Board Block Diagram	9-14
Figure 9-10: A15 MMU Board Block Diagram	9-14
Figure 9-11: A17 Executive Processor Board Block Diagram	9-15
Figure 9-12: A18 Memory Board Block Diagram	9-16
Figure 9-13: A19 Strobe/TDR Buffer Board Block Diagram	9-17
Figure 9-14: A26 M/F Acquisition Interconnect Board Block Diagram	9-17
Figure 9-15: A27 Acquisition Analog Board Block Diagram	9-18
Figure 9-16: A28 Acquisition MPU Board Block Diagram	9-18
Figure 10-1: Cabinet	10-9
Figure 10-2: Front Panel	10-11
Figure 10-3: Chassis, Rear	10-13
Figure 10-4: Circuit Boards	10-15

List of Figures

Figure 10-5: Acquisition Module	10-19
Figure 10-6: Power Supply	10-23
Figure 10-7: Accessories	10-25

List of Tables

Table 1-1: Measurement Limits, Specifications, Adjustments, and Functional Tests	1-1
Table 2-1: Power-Cord Conductor Identification	2-5
Table 4-1: Measurement Limits, Specifications, and Functional Tests	4-1
Table 4-2: Test Equipment	4-3
Table 4-3: Voltage Source Settings	4-27
Table 4-4: Vertical Offset Test Values	4-30
Table 4-5: Sensitivity Settings	4-33
Table 4-6: Prescaler Test Settings	4-42
Table 5-1: Measurement Limits and Adjustments	5-2
Table 5-2: Test Equipment	5-3
Table 6-1: Relative Susceptibility to Damage from Static Discharge	6-6
Table 6-2: FRU Removal/Replacement Figure Cross Reference	6-8
Table 6-3: Emergency Procedures for Contact with Battery Solvent	6-28
Table 6-4: Checks Required After FRU Replacement	6-77
Table 6-5: Extended Diagnostics Error Index Code Descriptions ...	6-82
Table 6-6: System Mode Commands	6-87
Table 6-7: Event Code Descriptions	6-87
Table 6-8: Board FRUs	6-91
Table 6-9: Component Module FRUs	6-92
Table 6-10: Executive Processor Kernel Error Index Codes	6-93
Table 6-11: Executive Processor Status LED Configuration	6-94
Table 6-12: Executive Processor Manual Tests	6-95
Table 6-13: Display Processor Kernel Error Index Codes	6-97
Table 6-14: Display Processor Status LED Configuration	6-97
Table 6-15: Time Base Processor Kernel Error Index Codes	6-98
Table 6-16: Acquisition Processor Kernel Error Index Codes	6-100
Table 6-17: A14 I/O Board Fuse Failures	6-104
Table 6-18: Time Base Calibration Errors	6-107
Table 7-1: Power-Cord Conductor Identification	7-2
Table 10-1: Board FRUs	10-3