

Contents

1. General Information	
Specifications	1-2
Safety Considerations	1-2
Instruments Covered By Manual	1-3
Options	1-3
Accessories	1-4
2. Installation	
Initial Inspection	2-2
Preparation For Use	2-3
Power Requirements	2-3
Line Voltage Selection	2-3
Power Cord	2-3
Operators Maintenance	2-5
Air Filter	2-5
Fuse Replacement	2-5
Hewlett-Packard Interface Bus	2-6
HP-IB Address Selection	2-7
Rack Mounting	2-8
Operating Environment	2-9
Storage & Shipment	2-9
Repackaging For Shipment	2-9
3. Remote Control	
Connecting The HP 3764A To HP-IB	3-3
Talk Only	3-3
Connecting The External Printer	3-3
Configuring Results	3-3
Printing Results	3-5
Addressable	3-6
Communication With The Bus Controller	3-6
Remote & Local Operation	3-6
General Programming Characteristics	3-7
Response/Program Message Format	3-7
Response/Program Message Parameters	3-7
Response/Program Message Terminators	3-7
Combining Response/Program Messages	3-7
Response/Program Message Validity	3-7
Initialising The HP 3764A	3-8
Response/Program Messages	3-10
Status Reporting	3-40
Status Byte	3-40

Service Request Mask (SRQ)	3-40
Demonstration Programs	3-42
Jitter Transfer Function	3-42
Jitter Tolerance	3-50
General HP-IB Information	3-56
Useful Reference Publications	3-56
HP-IB Capability	3-56
HP-IB Universal Commands	3-57

4. Performance Tests

Introduction	4-1
Equipment Required	4-1
Test Record	4-1
Calibration Cycle	4-1
Performance Test Index	4-1
Recall	4-1
Preliminary Procedure	4-1
Generator Clock Output	4-2
Specification	4-2
Frequency	4-2
Amplitude	4-4
Format	4-4
Intrinsic Jitter	4-4
Description	4-4
Equipment	4-4
Method	4-4
Frequency	4-4
Standard, Options 002, 003 Only	4-5
Option 001 Only	4-5
Option 005 Only	4-5
Options 006, 007	4-6
Option 006 Only	4-7
Amplitude, Format & Intrinsic Jitter	4-7
All Options	4-7
Options 001, 005 Only	4-7
Option 006 Only	4-8
Generator External Clock Input	4-9
Specification	4-9
Description	4-9
Equipment	4-9
Method	4-9
Gen Clock Mon O/P	4-10
Specification	4-10
Description	4-10
Equipment	4-10
Method	4-10
Generator Data Output	4-11
Specifications	4-11
Coded Output (All Options)	4-11
Binary Output (All Options)	4-11
Coded Output (Options 001, 005 and 006)	4-12

Binary Output	4-12
Description	4-12
Equipment	4-12
Method	4-13
Coded Output (All Options)	4-13
Coded Output (Options 001, 005, 006)	4-14
Binary Output	4-14
Delayed Data Outputs (Option 003 Only)	4-16
Specification	4-16
Description	4-16
Equipment	4-16
Method	4-16
Coded Output	4-16
Binary Output	4-18
Delay Measurement	4-19
Alternating Word Input	4-20
Specification	4-20
Description	4-20
Equipment	4-20
Method	4-20
Generator Trigger Output	4-21
Specification	4-21
Description	4-21
Equipment	4-21
Method	4-21
Error Add	4-22
Specification	4-22
Description	4-22
Equipment	4-22
Method	4-22
Receiver Data Input & Receiver Monitor Data Input	4-23
Specification	4-23
Coded (Options 001, 005, 006 Only)	4-23
Binary (Option 001, 005, 006 Only)	4-23
Coded (All Other Options)	4-24
Binary (All Other Options)	4-24
Description	4-24
Equipment	4-24
Method	4-24
Terminated Mode	4-24
Terminated Mode (Options 001, 005, 006)	4-25
Monitor Mode	4-25
Monitor Mode (Options 001, 005, 006)	4-25
Binary	4-25
Binary (Options 001, 005)	4-26
Binary (Option 006)	4-26
Receiver Clock Output	4-27
Specification	4-27
Description	4-27
Equipment	4-27
Method	4-27

Error Measurement and Errors Output	4-28
Specification	4-28
Description	4-28
Equipment	4-28
Method	4-28
Receiver Trigger Output	4-29
Specification	4-29
Description	4-29
Equipment	4-29
Method	4-29
Synchronization	4-30
Specification	4-30
Automatic	4-30
Manual	4-30
External	4-30
Description	4-30
Equipment	4-30
Method	4-30
Automatic	4-30
Manual	4-31
External	4-31
External Error	4-32
Specification	4-32
Description	4-32
Equipment	4-32
Method	4-32
Jitter Generation (Options 002 and 007)	4-33
Specification	4-33
Internal Modulation	4-33
External Modulation	4-33
Description	4-34
Equipment	4-34
Method	4-34
Internal	4-34
External	4-35
Jitter Measurement (Options 002, 007)	4-37
Specification	4-37
Description	4-37
Equipment	4-37
Method	4-37
Intrinsic Jitter	4-37
Receiver Clock	4-38
Receiver Data	4-39
Jitter Hits Measurement and Output	4-41
Specification	4-41
Description	4-41
Equipment	4-41
Method	4-41
Jitter Reference Clock Input	4-42
Specification	4-42
Description	4-42

Equipment	4-42
Method	4-42
Demodulated Jitter Output and Jitter Measurement Input	4-43
Specification	4-43
Demodulated Jitter Output	4-43
Jitter Measurement Input	4-43
Description	4-43
Equipment	4-43
Method	4-43
Jitter Internal Filters	4-45
Specification	4-45
Description	4-45
Equipment	4-45
Method	4-45
THRU Data (Option 007 Only)	4-47
Specification	4-47
Description	4-47
Equipment	4-48
Method	4-48
Coded CMI	4-48
A. Remote Control Error Numbers	
Error Reporting	A-1
HP-IB Programming Errors (n1)	A-1
Peripheral (Printer & Tape Cartridge Unit) Error Numbers (n2)	A-2
Self Test Error Numbers (n3)	A-3
B. Measurement Messages To Peripheral	
C. Alphabetical List of Response/Program Messages	
Index	

Figures

1-1. Serial Number Plate	1-3
2-1. Power Cord Part Numbers	2-4
2-2. HP-IB Connections & Logic Levels	2-6
2-3. Rack Mount Kits	2-8
3-1. Thinkjet HP-IB Configuration Switch	3-3
3-2. Thinkjet Printout of Measurement Results & Messages	3-6
4-1. CMI PRBS Eye Diagram	4-13
4-2. NRZ Binary Eye Diagram	4-15
4-3. CMI PRBS Eye Diagram	4-17
4-4. NRZ Binary Eye Diagram	4-18
4-5. CMI PRBS Eye Diagram	4-49

Tables

1-1. List Of Recommended Test Equipment	1-23
2-1. Fuses	2-3
2-2. HP-IB Interconnecting Cables	2-6
3-1. Default Settings	3-8
4-1. VARB 1, VARB 2 Frequencies	4-6
4-2. Option 006 RATE & OFFSET Settings	4-7
A-1. HP-IB Programming Error Numbers (n1)	A-1
A-2. Tape Cartridge/Internal Printer Error Numbers (n2)	A-2
A-3. Self Test Error Numbers (n3)	A-3
B-1. Measurement Messages	B-1