



HEWLETT
PACKARD

Mainframe
Operating Manual

HP 37717B
Communications
Performance Analyser

Contents

Mainframe Operating Manual	1
Warranty	2
WARNING	2
About This Manual	2

1 Getting Started

About the HP 37717B	1-1
Option Summary	1-3
Power Requirements	1-5
Obtaining and Modifying the HP 37717B Displays	1-6
Other Front Panel Keys	1-8
Status Indicators	1-9
Connectors	1-11
Basic Error Measurement Demonstration	1-14
Structured PDH Setup (Option UKJ [USA])	1-14

2 Mainframe Operating Features

Ordering Upgrade Modules	2-1
Graphics	2-2
Obtaining Graphics Results	2-3
Recalling Previously Stored Results	2-4
Viewing the Bar Graph Display	2-4
Viewing the Error and Alarm Summaries	2-5
Viewing the Stored Results Status	2-6
Printing Graphics Displays	2-7
Logging Results	2-8
Test Period Logging	2-8
Error Event Logging	2-9

Contents

Centronics Parallel Printer Port	2-10
HP-IB External Printer	2-11
RS-232-C External Printer	2-11
Disk Drive	2-12
Printing from Disk	2-13
To Print from DOS Prompt	2-13
To Print from Windows	2-13
External HP 550C DeskJet Printer	2-14
Connecting an HP 550C DeskJet Printer to RS-232-C Port	2-14
Connecting an HP 550C DeskJet Printer to Parallel Port	2-15
Internal Printer Changing Paper	2-16
Autosetup	2-17
SDH Input	2-17
PDH Input	2-18
Stored Settings	2-19
Select Settings to be Stored	2-23
Title the Settings	2-24
Save the Settings	2-24
Recall Default Settings	2-24
Recall Previously Stored Settings (FAS Monitoring)	2-25
Disk Drive	2-26
Directory Structure	2-26
Portability of Disks	2-26
To Format a Disk	2-27
To Label a Disk	2-27
File and Directory Management	2-28
Adding Descriptors to .CNF and .SMG Files	2-30
To Save Current Instrument Configuration to Disk	2-31
To Save Data Logging to Disk	2-32
To Recall Configurations from Disk to Instrument	2-33
To Recall Graphics Results from Disk to Instrument	2-33
To Copy Configuration from Instrument Store to Disk	2-34
To Copy Configuration from Disk to Instrument Store	2-34
To Copy Graphics from Instrument Store to Disk	2-35

Contents

To Delete a File	2-35
To Delete a Directory	2-36
To Rename a File	2-36
To Create a Directory	2-37
Printing from Disk	2-37
To Print from DOS Prompt	2-37
To Print from Windows	2-37
Coupling Transmit and Receive Settings	2-38
Time & Date	2-39
Setting Time and Date	2-39
Keyboard Lock	2-40
Lock/Unlock the Keyboard	2-40
Beep On Received Error	2-41
Enable/Disable Beep On Error	2-41
Analysis Control (Option UKJ[USA] only)	2-42
Analysis Control (Option UKK[USB] only)	2-42
Self Test	2-43
Additional Tests	2-44

Logging Messages A-1

Logging Devices	A-1
Results Logging	A-1
During the Measurement Period	A-2
At the End of the Measurement Period	A-6
Bar Graph Logging (External Printer Only)	A-6
Graphics Text Results Logging (External Printer Only)	A-8
Jitter Auto Tolerance Results Logging	A-8
Results Snapshot Logging	A-8
Overhead Snapshot Logging	A-10
Overhead Capture Logging	A-11
SDH Tributary Scan Logging	A-12
Pointer Graph Logging	A-13

Results Definitions B-1

Trouble Scan	B-1
--------------	-----

Contents

PDH Alarm Scan (Options UKJ[USA], UKL[USC])	B-2
SDH Alarm Scan (Options A1T [A1U], A3R [A3S])	B-2
Short Term Results	B-3
PDH Results (Options UKJ[USA], UKK[USB] and UKL[USC])	B-3
SDH Results (Options US1[US5], A1T[A1U], A3R [A3S])	B-3
ATM Results (Option UKN)	B-4
Cumulative Results	B-5
PDH Results (Options UKJ[USA], UKK [USB]and UKL[USC])	B-5
SDH Results (Option US1[US5], A1T[A1U], A3R [A3S])	B-5
ATM Results (Option UKN)	B-6
PDH Error Analysis G.821, G.826, M2100, M2110, M2120	B-7
G.821 Bit Errors	B-7
G.821 Frame (FAS) Errors	B-8
G.821 CRC Errors	B-9
G.821 REBE Errors	B-10
G.826 PDH Analysis	B-11
PDH M.2100 Frame Analysis	B-19
PDH M.2110 BIS (Bring Into Service)	B-20
PDH M.2120 Circuit Maintenance	B-20
SDH Error Analysis (Option US1[US5], A1T[A1U], A3R [A3S])	B-21
G.826 Analysis RS B1 BIP	B-21
G.826 Analysis MS B2 BIP	B-22
G.826 Analysis MS FEBE (Option A1T[A1U], A3R [A3S] only)	B-23
G.826 Path B3 BIP Analysis	B-24
G.826 Path FEBE Analysis	B-25
G.826 Path IEC Analysis (Option A1T[A1U], A3R [A3S] only)	B-26
G.826 TU Path BIP Analysis - 34 Mb/s Payload	B-27
G.826 TU Path BIP Analysis - 2 Mb/s Payload	B-28
G.826 TU Path FEBE Analysis - 34 Mb/s Payload	B-29
G.826 TU Path FEBE Analysis - 2 Mb/s Payload	B-30
ATM Error Analysis (Option UKN)	B-31
G.826 ATM EM BIP Analysis	B-31

Contents

G.826 ATM FEBE Analysis	B-32
G.826 ATM REBE Analysis	B-33
G.826 ATM CRC4 Analysis	B-34
SDH Pointer Value Results (Option A1T [A1U], A3R [A3S])	B-35
Jitter Results (Options UHN[US9], A1M[A1Q], A1N[A1R], A1P[A1S], A3L [A3M], A3V [A3W], A3N [A3P])	B-36
Alarm Seconds	B-37
PDH Alarm Seconds	B-37
SDH Alarm Seconds (Options US1[US5], A1T[A1U], A3R [A3S])	B-38
ATM Alarm Seconds (Option UKN)	B-38
Frequency Measurement	B-39

Appendix C- Self Test Fail Numbers

Hewlett-Packard Sales and Service Offices 5
About This Edition 1
In This Book 2