



**Programming
Guide**

**HP 53131A/132A 225 MHz
Universal Counter**

Programming Guide

This guide describes how to program the HP 53131A/132A 225 MHz Universal Counter. The information in this guide applies to instruments having the number prefix listed below, unless accompanied by a "Manual Updating Changes" package indicating otherwise.

SERIAL NUMBER PREFIX: 3546 to 3622 (HP 53131A)
3546 to 3646 (HP 53132A)

HP 53131A/132A 225 MHz
Universal Counter

Contents

1 Before You Start ...

Introduction 1-2

Differences Between Prior and Current Revisions of the HP 53131A/132A
1-3

HP 53131A Containing Firmware Revisions (3317, 3335,
or 3402) 1-3

HP 53132A Time Interval Delay Arming 1-5

Getting Started 1-6

How to Use This Guide 1-6

New Users 1-6

What You Should Understand 1-6

Learning to Program the Counter 1-7

Experienced Programmers 1-7

Applications 1-8

Programming Guide Contents 1-9

Assumptions 1-9

Related Documentation 1-10

2 Command Summary

Introduction 2-2

Chapter Summary 2-2

Front Panel to SCPI Command Maps 2-3

Some SCPI Syntax Conventions 2-3

Input Channels Conditioning Keys to SCPI
Command Map 2-4

Instrument Control, Utility, Recall, and Save & Print
Keys to SCPI Command Map 2-6

MEASURE Keys to SCPI Command Map 2-8

Gate & ExtArm Key to SCPI Command Map 2-10

Gate & ExtArm Key to SCPI Command Map — For HP 53131A (and
HP 53132A With S/N Prefix
Below 3646) 2-13

LIMITS and MATH Keys to SCPI Command Map 2-16

Contents

Calibration Menu to SCPI Command Map	2-18
HP 53131A/132A Command Summary	2-20
SCPI Conformance Information	2-20
IEEE 488.2 Common Commands	2-21
HP 53131A/132A SCPI Subsystem Commands	2-24
Std/New Column	2-24
Parameter Form Column	2-24
*RST Response	2-40
3 Programming Your Universal Counter for Remote Operation	
Introduction	3-2
Chapter Summary	3-2
Where to Find Some Specific Information	3-2
Where to Find HP BASIC Programming Examples	3-3
Where to Find QuickBASIC Programming Examples	3-3
Where to Find Turbo C Programming Examples	3-3
Configuring the HP-IB	3-4
To Set the HP-IB Mode and Address	3-4
To Connect the Counter to a Computer	3-6
Remote/Local Operation	3-6
Overview of Command Types and Formats	3-7
Common Command Format	3-7
SCPI Command and Query Format	3-7
Elements of SCPI Commands	3-8
Subsystem Command Syntax	3-8
Common Command Syntax	3-8
Abbreviated Commands	3-9
Keyword Separator	3-9
Optional Keyword	3-9
Implied Channel (Optional Numeric Keyword Suffix)	3-10
Parameter Types	3-11
Parameter Separator	3-12
Query Parameters	3-12

Contents

Suffixes	3-12
Suffix Elements	3-12
Suffix Multipliers	3-13
Command Terminator	3-13
Using Multiple Commands	3-14
Program Messages	3-14
Program Message Syntax	3-14
Overview of Response Message Formats	3-16
Response Messages	3-16
Response Message Syntax	3-16
Response Message Data Types	3-17
Status Reporting	3-19
Status Byte Register and Service Request Enable Register	3-21
Status Byte Register	3-21
Service Request Enable Register	3-23
Standard Event Status Register Group	3-24
Standard Event Status Register	3-24
Standard Event Status Enable Register	3-26
Operation Status Register Group and Questionable Data/Signal Status Register Group	3-27
Condition Register	3-28
Transition Filter	3-28
Event Register	3-29
Event Enable Register	3-29
Operation Status Register Group	3-30
Questionable Data/Signal Status Register Group	3-32
Command Settings for Optimizing Throughput	3-35
Commands to Set Counter for Optimal Throughput	3-35
Typical Optimizing Throughput Results for Different Computers	3-37
How to Program the Counter for Status Reporting	3-38
Determining the Condition of the Counter	3-38
Resetting the Counter and Clearing the HP-IB Interface—Example 1	3-38
Using the Standard Event Status Register to Trap an Incorrect HP-IB command—Example 2	3-39

Contents

Event Status Register	3-39
Using the Questionable Data/Signal Status Register to Alert the Computer When Automatic Interpolator Calibration is Disabled—Example 3	3-39
Questionable Data Status Register	3-40
Using the Operation Status Register to Alert the Computer When Measuring has Completed—Example 4	3-40
Operation Status Register	3-40
How to Program the Counter to Display Results	3-43
Configuring the Counter's Display	3-43
Commands for Displaying Non-Scaled/Offset Results	3-43
Commands for Displaying Scaled/Offset Results	3-44
Commands for Displaying the Limit Graph	3-44
Commands for Displaying Statistics Results	3-44
Commands for Enabling and Disabling the Display	3-45
How to Program the Counter to Synchronize Measurements	3-46
Synchronizing Measurement Completion	3-46
Resetting the Counter and Clearing the HP-IB Interface	3-46
Using the *WAI Command	3-46
Using the *OPC? Command	3-47
Using the *OPC Command to Assert SRQ	3-48
How to Program the Counter for Math/Limit Operations	3-49
Updating Math and Limit Results Over HP-IB	3-49
Using the Scale and Offset Over HP-IB	3-50
How to Program the Counter to Define Macros	3-52
Writing SCPI Programs	3-55
Programming Examples	3-58
Using HP BASIC	3-58
To Send a Double-Quoted String	3-58
To Send a Single-Quoted String	3-58
Using QuickBASIC	3-59
Using Turbo C	3-59
List of the Programming Examples	3-59
Easiest Way to Make a Measurement (HP BASIC)	3-60
To Make a Frequency Measurement (HP BASIC)	3-62

Contents

To Perform Limit Testing (HP BASIC)	3-63
To Measure the Statistics of 50 Measurements (HP BASIC)	3-64
To Use Limits to Filter Data Before Measuring Stats (HP BASIC)	3-66
To Read and Store Calibration Information (HP BASIC)	3-68
To Perform a Time Interval Calibration (HP BASIC)	3-69
To Optimize Throughput (HP BASIC)	3-73
To Use Macros (HP BASIC)	3-75
To Make a Frequency Measurement (QuickBASIC)	3-77
To Perform Limit Testing (QuickBASIC)	3-78
To Measure the Statistics of 50 Measurements (QuickBASIC)	3-80
To Use Limits to Filter Data Before Measuring Stats (QuickBASIC)	3-82
To Read and Store Calibration Data (QuickBASIC)	3-85
To Optimize Throughput (QuickBASIC)	3-86
To Use Macros (QuickBASIC)	3-88
To Make a Frequency Measurement (Turbo C)	3-91
To Use Limits to Filter Data Before Measuring Statistics (Turbo C)	3-93
To Optimize Throughput (Turbo C)	3-96

4 Command Reference

- Introduction 4-2
- :ABORt Command 4-4
- :CALCulate Subsystems 4-5
- :CALCulate[1] Subsystem 4-7
 - :CALCulate[1]:MATH Subtree 4-9
- :CALCulate2 Subsystem 4-11
 - :CALCulate2:LIMit Subtree 4-12
- :CALCulate3 Subsystem 4-19
 - :CALCulate3:AVERage Subtree 4-19
 - :CALCulate3:LFIltter Subtree 4-23
- :CALibration Subsystem 4-26
 - :CALibration:SECurity Subtree 4-28
- :CONFigure Subsystem 4-30
- Device Clear 4-31
- :DIAGnostic Subsystem 4-32
- :DISPlay Subsystem 4-37
- :FETCh Subsystem 4-40
- :FORMat Subsystem 4-41
- Group Execute Trigger (GET) 4-42
- :HCOPy Subsystem 4-43
- :INITiate Subsystem 4-44
- :INPut[1/2] Subsystem 4-48
- :INPut3 Subsystem 4-50
- :MEASure Subsystem 4-51
- Measurement Instructions (:CONFigure, :FETCh, :MEASure, :READ) 4-52
 - Using :MEASure 4-75
 - Using :CONFigure with :READ? 4-76
 - Using :CONFigure with :INITiate and :FETCh? 4-76
 - Firmware Revision Work-Around Commands 4-77
- :MEMory Subsystem 4-79
- [[:SENSe] Subsystem 4-80
 - [[:SENSe]:EVENT[1/2] Subtree 4-80

Contents

[:SENSe]:EVENT3 Subtree	4-84
[:SENSe]:FREQuency Subtree	4-85
[:SENSe]:FREQuency:ARM Subtree	85
[:SENSe]:PHASe Subtree	4-91
[:SENSe]:PHASe:ARM Subtree	4-91
[:SENSe]:ROSCillator Subtree	4-92
[:SENSe]:TINTerval Subtree (HP 53131A and HP 53132A With S/N Prefix Below 3646)	4-95
[:SENSe]:TINTerval:ARM Subtree (HP 53131A and HP 53132A With S/N Prefix Below 3646)	4-95
[:SENSe]:TINTerval Subtree (HP 53132A With S/N Prefix 3646 and Above)	4-98
[:SENSe]:TINTerval:ARM:ESTART and :ESTOP Subtrees (HP 53132A With S/N Prefix 3646 and Above)	4-98
[:SENSe]:TOTAlize Subtree	4-104
[:SENSe]:TOTAlize:ARM Subtree	4-104
:STATus Subsystem	4-107
:STATus:OPERation Subtree	4-107
:STATus:QUESTionable Subtree	4-110
:SYSTem Subsystem	4-114
:SYSTem:COMMunicate Subtree	4-114
:TRACe Subsystem	4-119
:TRIGger Subsystem	4-121
*CAL? (Calibration Query)	4-122
*CLS (Clear Status Command)	4-123
*DDT <arbitrary block> (Define Device Trigger Command)	4-124
*DMC <string>, <arbitrary block> (Define Macro Command)	4-125
*EMC <NRf> (Enable Macro Command)	4-126
*EMC? (Enable Macro Query)	4-126
*ESE <NRf> (Standard Event Status Enable Command)	4-127
*ESE? (Standard Event Status Enable Query)	4-127
*ESR? (Event Status Register Query)	4-128
*GMC? <string> (Get Macro Contents Query)	4-129

*IDN? (Identification Query)	4-130
*LMC? (Learn Macro Query)	4-131
*OPC (Operation Complete Command)	4-132
*OPC? (Operation Complete Query)	4-133
*OPT? (Option Identification Query)	4-134
*PMC (Purge Macro Command)	4-135
*RCL <Nrf> (Recall Command)	4-136
*RST (Reset Command)	4-137
*SAV <Nrf> (Save Command)	4-138
*SRE <Nrf> (Service Request Enable Command)	4-139
*SRE? (Service Request Enable Query)	4-139
*STB? (Status Byte Query)	4-140
*TRG (Trigger Command)	4-141
*TST? (Self-Test Query)	4-142
*WAI (Wait-to-Continue Command)	4-143

5 Errors

Introduction	5-2
Displaying Errors	5-2
Reading an Error	5-2
Error Queue	5-3
Error Types	5-4
No Error	5-4
Command Error	5-4
Execution Error	5-5
Device- or Counter-Specific Error	5-5
Query Error	5-6