

---

# Assembly-Level Service Guide

This guide describes how to service the HP 53131A and HP 53132A Universal Counters, and the HP 53181A Frequency Counter. The information in this guide applies to instruments having the number prefix listed below, unless accompanied by a "Manual Updating Changes" package indicating otherwise.

**SERIAL PREFIX NUMBER:**

3547 and above (HP 53131A)

3547 and above (HP 53132A)

3548 and above (HP 53181A)

---

HP 53131A/132A/181A  
225 MHz Counter

# Contents

## Preface

<b>How to Use This Guide</b>	<b>ix</b>
Repair Strategy	ix
Instrument Identification	ix
Instruments Covered by this Guide	ix
Assembly-Level Service Guide Organization	x
How to Order Guides	xi
<b>Description of the 225 MHz Counters</b>	<b>xi</b>
<b>Options</b>	<b>xii</b>
Hardware	xii
Support	xiii
<b>Accessories Supplied and Available</b>	<b>xiii</b>

## 1 Performance Tests

<b>Introduction</b>	<b>1-2</b>
Operational Verification	1-2
Complete Performance Tests	1-3
Optional HP-IB Verification	1-3
Recommended Calibration Cycle	1-3
Test Record	1-3
<b>Equipment Required</b>	<b>1-4</b>
<b>HP 53131A/132A/181A Operational Verification</b>	<b>1-5</b>
Power-On Self Tests	1-5
Run Self Test	1-8
Termination Check	1-8
External Arm Test (HP 53131A/132A Only)	1-10
External Timebase Tests	1-12
<b>HP 53131A/132A Complete Performance Tests</b>	<b>1-15</b>
Test 1: Time Interval (HP 53131A/132A Only)	1-16
Test 2: Trigger Level (HP 53131A/132A Only)	1-18
Test 3: Channels 1 and 2 Frequency Sensitivity (HP 53131A/132A Only)	1-21

## Contents

Test 4: Channels 1 and 2 Frequency Accuracy (HP 53131A/132A Only)	1-26
Test 5: Option 030/050 Channel 3 Frequency Sensitivity (HP 53131A/132A Only)	1-29
Test 6: Option 030/050 Channel 3 Frequency Accuracy (HP 53131A/132A Only)	1-32
Test 7: Peak Volts, Channels 1 and 2 (HP 53131A/132A Only)	1-35
HP 53131A/132A HP-IB Verification Program (Optional)	1-38
HP 53131A/132A Performance Test Record	1-39
HP 53181A Complete Performance Tests	1-45
Test 1: Trigger Level (HP 53181A Only)	1-46
Test 2: Channel 1 Frequency Sensitivity (HP 53181A Only)	1-49
Test 3: Channel 1 Frequency Accuracy (HP 53181A Only)	1-53
Test 4: Option 015/030/050 Channel 2 Frequency Sensitivity	1-56
Test 5: Option 015/030/050 Channel 2 Frequency Accuracy (HP 53181A Only)	1-60
Test 6: Peak Volts, Channel 1 (HP 53181A Only)	1-64
HP 53181A HP-IB Verification Program (Optional)	1-66
HP 53181A Performance Test Record (Page 1 of 4)	1-67

## Contents

### 2 Service

#### Introduction 2-2

#### Returning the Instrument to Hewlett-Packard for Service 2-3

- To Provide Repair Information 2-3
- To Pack in the Original Packaging Materials 2-3
- To Pack in the Commercially Available Materials 2-4

#### About the HP 53131A/132A Calibration Menu 2-5

- Overview of the HP 53131A/132A Calibration Menu 2-5
- The HP 53131A/132A Calibration Menu Tree 2-7
- To View the Calibration Menu and Security Status 2-8
- To Unsecure for Calibration 2-8
- To Initiate the Calibration Routines 2-8
- To Secure Against Calibration 2-11
- To Change to a New Security Code 2-12
- To View the Calibration Count 2-12
- To Get Help with the Calibration Menu 2-12

#### The HP 53131A/132A Calibration Procedures 2-13

- First Determine the Counter Firmware Revision 2-13
- To Calibrate the Offset for Channels 1 and 2 2-13
- To Calibrate the Gain for Channels 1 and 2 2-15
- To Calibrate Time Interval 2-17
- To Calibrate the Standard Timebase 2-21
- To Calibrate the High Stability Timebase Option  
(Medium, High, or Ultra-High) 2-21

#### About the HP 53181A Calibration Menu 2-23

- Overview of the HP 53181A Calibration Menu 2-23
- The HP 53181A Calibration Menu Tree 2-25
- To View the Calibration Menu and Security Status 2-26
- To Unsecure for Calibration 2-26
- To Initiate the Calibration Routines 2-26
- To Secure Against Calibration 2-27
- To Change to New the Security Code 2-28
- To View the Calibration Count 2-28
- To Get Help with the Calibration Menu 2-28

## Contents

<b>The HP 53181A Calibration Procedures</b>	<b>2-29</b>
First Determine the Counter Firmware Revision	2-29
To Calibrate the Offset for Channel 1	2-29
To Calibrate the Gain for Channel 1	2-31
To Calibrate the Standard Timebase	2-32
To Calibrate the High Stability Timebase Option (Medium, High, or Ultra-High)	2-33
<b>Pre-Troubleshooting Information</b>	<b>2-34</b>
Safety Considerations	2-34
Recommended Test Equipment	2-36
Repair Considerations	2-36
After Service Considerations	2-37
Assembly Identification and Location	2-38
<b>Troubleshooting the Counter</b>	<b>2-43</b>
Power Supply Check	2-43
Overview of the Self-Test Routines	2-47
Diagnosing the Faulty Assembly by Using the Self Tests	2-48

## 3 Replacing Assemblies

<b>Introduction</b>	<b>3-2</b>
<b>Tools Required</b>	<b>3-3</b>
<b>Do This First</b>	<b>3-3</b>
To Remove the Cover	3-4
To Remove the Front Bezel	3-6
To Remove A1 Motherboard Assembly	3-8
To Remove the A2 Display Board, Keypads, and Window	3-10
To Remove A3 1.5/3.0/5.0 GHz Channel Assembly (Option 015/030/050)	3-12
To Remove A4 AC Power Supply Assembly	3-14
To Remove A5 DC Power Input Assembly (Option 002)	3-16

## Contents

To Remove A6 High Stability Timebase Assembly (Options 001, 010, and 012)	3-18
To Remove the Rear Terminals (Option 060)	3-20

## 4 Retrofitting Options

<b>Introduction</b>	<b>4-2</b>
<b>Tools Required</b>	<b>4-2</b>
<b>Do This First</b>	<b>4-2</b>
To Retrofit A3 1.5/3.0/5.0 GHz Channel Assembly	4-3
To Retrofit A5 DC Power Input Assembly (Option 002)	4-6
To Retrofit A6 High Stability Timebase Assembly Options 001, 010, and 012	4-12
To Retrofit the Rear Terminals (Option 060)	4-17

## 5 Replaceable Parts

<b>Introduction</b>	<b>5-2</b>
<b>Exchange Assemblies</b>	<b>5-2</b>
<b>Reference Designations</b>	<b>5-3</b>
<b>Replaceable Parts</b>	<b>5-3</b>
<b>How To Order A Part</b>	<b>5-4</b>
<b>Cabinet Parts and Hardware</b>	<b>5-6</b>

## 6 Backdating

<b>Introduction</b>	<b>6-2</b>
<b>Manual Changes</b>	<b>6-2</b>
<b>Older Instruments</b>	<b>6-2</b>
<b>Backdating Hardware</b>	<b>6-3</b>
<b>Backdating Firmware</b>	<b>6-4</b>