

---

# Contents

## **Preface**

Operating Guide Contents and Organization	vii
Related Documents	viii
Types of Service Available if Your Instrument Fails	viii
Repackaging for Shipment	ix
Description of the 225 MHz Frequency Counter	x
Options	xi
Accessories Supplied and Available	xii

## **HP 53181A Quick Reference Guide**    **xiii**

### **1    Getting Started**

The Front Panel at a Glance	1-2
The Front Panel Indicators at a Glance	1-3
The Front Panel Menus at a Glance	1-5
The Display Annunciators at a Glance	1-8
The Display Special Characters at a Glance	1-9
The Underscore Placeholder	1-9
The Asterisk Placeholder	1-9
The Limit Test Graph Characters at a Glance	1-10
The Rear Panel at a Glance	1-11
Making Measurements	1-12
To Measure Frequency	1-14
To Select Input Coupling and Impedance	1-15
To Set Input Channel Trigger Level/Sensitivity	1-16
To Select Scale and Offset	1-19
To Set Limits of Measurements	1-22
To Perform Statistics on Measurements	1-30
To Control Measurement	1-36

**2 Operating Your Frequency Counter****Introduction 2-2**

Chapter Summary 2-2

Where to Find Some Key Working Examples 2-2

**How this Counter Works for You 2-3****Summary of the Measurement Sequence 2-4****Using the Measurement Control Keys (Run and Stop/Single) 2-5**

Overview of the Measurement Control Keys 2-5

To Use the Measurement Control Keys 2-6

**Using Entry/Select (Arrow) Keys 2-8**

To Use During Numeric Entry 2-8

To Use When Sequencing Through the Other Meas and

Recall Menus 2-8

To Use During State Changing 2-9

To Use on Prompted Help Messages 2-9

**Using the MEASURE Menu Keys 2-10**

Overview of the MEASURE Menus 2-10

To Measure Frequency 2-11

To Measure Frequency Ratio 2-11

To Measure Period 2-12

To Measure Positive/Negative Volt Peaks 2-12

**Using the Gate & External Arm Menu Key 2-13**

Overview of Gate/External Arming Functions 2-13

To Use the Gate and External Arm 2-15

**Using the MATH Menu Keys 2-19**

Overview of Scale/Offset Math Menu 2-19

To Use the Scale/Offset Math Menu 2-20

Overview of Statistics (Stats) Menu 2-24

To Use the Stats Menu for Automatic and Continuous

Statistical Analysis 2-25

**Using the LIMITS Menu Keys 2-28**

Overview of Limits Menus 2-28

To Set and Use Automatic Limit Testing 2-29

**Using the DISPLAY Digits Keys 2-35**

Overview of the DISPLAY Digits Keys 2-35

To Use the DISPLAY Digits Keys 2-35

**Using CHANNEL 1 Input Conditioning Keys 2-37**

Overview of Trigger/Sensitivity Menu 2-37

To Use the Trigger/Sensitivity Key to Adjust Counter's

Trigger Voltage and Sensitivity Levels 2-40

Overview of Input Conditioning Toggle Keys 2-43

**Using the Save and Recall Menus 2-44**

Overview of Save and Recall Functions 2-44

To Use the Save Function 2-45

To Use the Recall Function 2-46

To Unsave a Measurement Setup 2-47

**Using the Print Menu 2-48**

Overview of the Print Menu 2-48

To Use the Print Menu 2-48

**Using the Utility Menu 2-49**

Overview of the Utility Menu 2-49

To Set the HP-IB Address 2-50

To Choose the Timebase Source 2-51

To Run the Self-Test Routines 2-52

To Configure the RS-232 Serial Port for Printing 2-54

To Configure the RS-232 Serial Port for Sending

Limit-Detect Output 2-56

To Select the Numerical Convention for the Display 2-57

To Connect the Counter to a Serial Printer via the

RS-232 Port 2-57

To Connect the Counter to a Printer via HP-IB 2-57

To Select the HP-IB Talk-Only Mode for Printing 2-58

**Front Panel Display Messages 2-59**

Measurement Result Displays 2-59

Power-Up/Self Test Messages 2-60

Menu Messages 2-61

HP-IB Messages 2-63

## **Contents**

### **Preset Values After Power-up and \*RST 2-64**

Preset Values for Functions Accessible Via Front Panel  
or HP-IB 2-64

Preset Values for Functions Accessible Via HP-IB Only 2-68

### **Common Questions 2-70**

Why is Stats result not available yet? 2-70

Why won't printer work? 2-70

Why did Counter stop measuring? 2-70

Why did Counter go to its default state after I set up my  
RS-232 port? 2-70

Counter's numeric display does not follow the numerical  
convention for my country. 2-70

## **3 Specifications**

Introduction 3-2

## **Index**