

TABLE OF CONTENTS

Section	Title	Page
I	GENERAL INFORMATION	1-1
	1-1. Introduction	1-1
	1-3. Manual Summary	1-1
	1-5. Specifications	1-1
	1-7. Safety Considerations	1-1
	1-9. Instrument Identification	1-1
	1-11. Accessories	1-1
	1-13. Description	1-5
	1-17. Options	1-5
	1-19. Recommended Test Equipment	1-5
II	INSTALLATION	2-1
	2-1. Introduction	2-1
	2-3. Unpacking and Inspection	2-1
	2-5. Preparation for Use	2-1
	2-6. Power Requirements	2-1
	2-8. Line Voltage Selection	2-1
	2-14. Power Cable	2-2
	2-16. Operating Environment	2-2
	2-19. HP-IB Interconnections	2-2
	2-22. 5335A HP-IB Address	2-4
	2-24. HP-IB Descriptions	2-4
	2-26. Field Installation of Options	2-4
	2-28. Field Installation of Option 010	2-4
	2-30. Field Installation Procedures for Option 020	2-4
	2-32. Field Installation Procedures for Option 030	2-5
	2-35. Field Installation Procedures for Option 040	2-6
	2-37. Storage and Shipment	2-8
	2-38. Environment	2-8
	2-41. Packaging	2-8
III	OPERATION AND PROGRAMMING	3-1
	3-1. Introduction	3-1
	3-4. Operating Characteristics	3-1
	3-7. Local Operation	3-1
	3-10. Remote Operation	3-1
	3-12. Operator's Self-Check Procedure	3-2
	3-14. General Operation Information	3-2
	3-15. Power-Up/Self-Check	3-2
	3-19. Display	3-2
	3-26. Keyboard	3-3
	3-28. Key Indicators	3-3
	3-30. Keyboard Memory	3-3
	3-33. Key Default	3-3
	3-35. Special Function Mode	3-4
	3-38. Front Panel Features	3-4
	3-41. Function Group	3-4
	3-48. Gate/Cycle Group	3-5
	3-56. Input Group (Standard Instrument)	3-6
	3-62. Input Group (Option 040)	3-6

TABLE OF CONTENTS (Continued)

Section	Title	Page
III	OPERATION AND PROGRAMMING (Continued)	
3-74.	Triggering (MANUAL/AUTO)	3-7
3-82.	Math Group	3-8
3-91.	Statistics Group	3-10
3-96.	Input C (Option 030)	3-11
3-98.	Volts (Option 020)	3-11
3-100.	Rear Panel Features	3-12
3-106.	Detailed Operating Instructions	3-13
3-108.	FREQ A (Channel A Frequency)	3-13
3-115.	TIME A-B (Time Interval A to B)	3-15
3-122.	TOT A (A Channel Events Totalized)	3-16
3-128.	RATIO A/B (Ratio of Frequencies of Channel A Signal to Channel B Signal)	3-17
3-130.	FREQ C	3-17
3-132.	1/TIME A-B	3-17
3-135.	PULSE A	3-17
3-138.	RATIO C/A	3-18
3-140.	PER A (Channel A Period Measurement)	3-18
3-142.	RISE/FALL A (Channel A Rise and Fall Time Measurement) ..	3-18
3-144.	SLEW A	3-18
3-146.	DUTY CYC A (Channel A Duty Cycle Measurement)	3-19
3-150.	GATE TIME	3-19
3-154.	TRIG LVL (Trigger Level)	3-19
3-157.	VOLTS	3-19
3-160.	PHASE A rel B	3-20
3-164.	Special Functions	3-21
3-167.	Programming	3-22
3-168.	Introduction	3-22
3-171.	Interface Function	3-22
3-175.	Bus Messages	3-23
3-177.	Address Selection	3-25
3-181.	Device Command Definitions	3-26
3-183.	Programming 5335A Option 040	3-27
3-185.	Trigger Level Setting TR, AT, BT	3-27
3-187.	The 5335A Device Commands	3-27
3-190.	Function Selection FU, FN	3-31
3-192.	Gate Time Setting GA, GO, GC	3-31
3-194.	Remote Display DR0, DR1, DI	3-31
3-196.	Default States	3-31
3-199.	Initialize	3-31
3-201.	Learn Mode Programming P?, PQ, PB	3-31
3-205.	SRQ and Status SR	3-32
3-209.	Program Execution/Response Times	3-32
3-211.	Output Format	3-32
3-217.	Output Modes	3-34
3-223.	Output of Statistics	3-34
3-226.	Programming Anomalies	3-34
3-228.	Programming Examples	3-35
3-230.	Trigger Level Programming Example	3-45
3-232.	Options	3-46
3-234.	Time Base Option 010	3-46

TABLE OF CONTENTS (Continued)

Section	Title	Page
III	OPERATION AND PROGRAMMING (Continued)	
	3-236. Digital Voltmeter Option 020	3-46
	3-238. C Channel Option 030	3-46
	3-240. Programmable Input Option 040	3-46
	3-242. Operator's Maintenance	3-46
	3-245. Power/Warm-Up	3-47
	3-248. Operator's Check	3-47
	3-252. Error/Fail Messages	3-47
	3-254. Operator Instruction Label	3-47
IV	PERFORMANCE TESTING	4-1
	4-1. Introduction	4-1
	4-3. Equipment Required	4-1
	4-5. Test Record	4-1
	4-7. Error/Fail Messages	4-1
	4-9. Local Operational Verification	4-1
	4-13. Preliminary Procedures	4-2
	4-15. Power-Up/Self Check Test Procedure I	4-2
	4-18. Super Check Test Procedure II	4-2
	4-22. Front End (Input Amplifier) Switch Test Procedure III	4-3
	4-24. Rear Panel External Arm Slope Switch Test Procedure IV	4-4
	4-26. Keyboard Check Test Procedure V	4-5
	4-28. DVM Test (Option 020) Procedure VI	4-6
	4-30. Channel "C" Test (Option 030) Procedure VII	4-6
	4-32. Programmable Input Amplifier Test (Option 040) Procedure VIII	4-6
	4-34. Performance Test for the 5335A and All Options	4-7
	4-37. Power-Up/Self Check Test Procedure I	4-7
	4-40. Supercheck Test Procedure II	4-7
	4-43. Keyboard Check Test Procedure III	4-8
	4-46. Rear Panel — External Arm Switch Test Procedure IV	4-8
	4-49. Gate Time Test Procedure V	4-9
	4-53. Channel A and B Frequency Response and Sensitivity Test Procedure VI	4-10
	4-62. Ratio A/B Function Test Procedure VII	4-11
	4-66. Time Interval and Inverse Time Interval Test Procedure VIII ..	4-14
	4-70. Pulse Width A and Pulse Width B Procedure IX	4-15
	4-74. Rise and All Time A Test Procedure X	4-16
	4-78. Slew Rate A Test Procedure XI	4-17
	4-82. Phase A rel B Test Procedure XII	4-17
	4-86. DVM (Option 020) Test Procedure XIII	4-18
	4-90. Channel C (Option 030) Test Procedure XIV	4-18
	4-94. HP-IB Verification Program Using the 9825A Controller	4-20
	4-103. 5335A HP-IB Verification Program Using the 85A Controller ...	4-40
V	ADJUSTMENTS	5-1
	5-1. Introduction	5-1
	5-4. Equipment Required	5-1
	5-6. Adjustment Locations	5-1
	5-8. Safety Considerations	5-1

TABLE OF CONTENTS (Continued)

Section	Title	Page
V	ADJUSTMENTS (Continued)	
5-10.	Adjustment Procedures	5-1
5-11.	A1 Power Supply Adjustment Procedure	5-1
5-13.	A3 Input Amplifier Adjustment Procedure	5-2
5-15.	A8 Digital Voltmeter (Option 020) Adjustment Procedure	5-4
5-17.	A9 Channel C Adjustment Procedure	5-4
5-19.	Oscillator Adjustment Procedure (Local and Option 010)	5-5
5-21.	A2 Channel A and B Level Shifter Adjustment Procedure	5-6
5-23.	Channel A and B Peak Detector Adjustment Procedure	5-7
5-25.	A6 Rear Panel Assembly Adjustment Procedure	5-7
5-27.	Option 040 Adjustment Procedures	5-9
5-29.	A12 Programmable Input Amplifier (Option 040) Adjustment Procedure	5-9
5-31.	A12 Peak Detectors Adjustment Procedure	5-11
5-33.	A12C46 Adjustment Procedure	5-11
5-34.	A12C30 Adjustment Procedure	5-12
5-35.	A11 DAC Adjustment Procedure	5-13
VI	REPLACEABLE PARTS	6-1
6-1.	Introduction	6-1
6-3.	Abbreviations	6-1
6-5.	Replaceable Parts	6-1
6-9.	Ordering Information	6-1
6-12.	Direct Mail Order System	6-1
VII	MANUAL CHANGES	7-1
7-1.	Introduction	7-1
7-3.	Manual Changes	7-1
7-6.	Older Instruments	7-1
7-8.	Selected Components (A3 Series 2120 or Below)	7-8
7-10.	Procedure for Selecting R7, R8, R80, or R81 in A3 Assembly ...	7-8
VIII	SERVICE	8-1
8-1.	Introduction	8-1
8-3.	Schematic Diagram Symbols and Reference Designators	8-1
8-5.	Reference Designations	8-1
8-7.	Identification Markings on Printed-Circuit Boards	8-1
8-11.	Assembly Identification	8-3
8-13.	Safety Considerations	8-4
8-18.	Safety Symbols	8-5
8-20.	Recommended Test Equipment	8-5
8-22.	Service Aids	8-5
8-23.	Pozidriv Screwdrivers	8-5
8-25.	Service Aids on Printed Circuit Boards	8-5
8-27.	How to Use the A16 Service Aid Board (05335-60013)	8-5
8-31.	Factory Selected Components	8-6
8-33.	Procedure to Select A3R83 on the Amplifier Buffer Assembly	8-6

TABLE OF CONTENTS (Continued)

Section	Title	Page
VIII	SERVICE (Continued)	
8-34.	Procedure to Select A3R29 on the Amplifier Buffer Assembly	8-6
8-35.	Procedure to Select the X10 Compensating Capacitors A3C37 and A3C23	8-6
8-36.	Logic Symbols	8-7
8-38.	Explanation of New Logic Symbols	8-7
8-39.	Introduction	8-7
8-44.	Symbol Composition	8-8
8-51.	Qualifying Symbols	8-9
8-64.	Dependency Notation	8-13
8-124.	Bistable Elements	8-20
8-128.	Coders	8-21
8-136.	Use of Binary Grouping to Produce Affecting Inputs	8-22
8-138.	Sequence of Input Labels	8-23
8-143.	Sequence of Output Labels	8-23
8-150.	Theory of Operation	8-24
8-151.	Overall Counter Operation	8-24
8-156.	Functional Descriptions of Assemblies	8-26
8-158.	A1 Power Supply Assembly	8-26
8-161.	A13 Line Module	8-26
8-163.	A2 Amplifier Support Board	8-26
8-166.	Auto-Triggering and Peak-Detectors	8-26
8-175.	Reading Trigger Levels	8-28
8-178.	Address Bus and Data Bus Signals	8-28
8-180.	A3 Input Amplifier Buffer	8-28
8-186.	A4 Main Logic Board	8-29
8-194.	Interpolator Technique	8-29
8-205.	A5 Keyboard and Display	8-32
8-208.	A6 Rear Panel Board	8-32
8-214.	A7 Hewlett-Packard Interface Bus Board	8-32
8-218.	A14 HP-IB Connector Board	8-32
8-220.	A8 Digital Voltmeter Board	8-32
8-223.	A9 Channel C Input Amplifier Board (Option 030)	8-33
8-226.	A10 Switch Panel (Option 040)	8-33
8-229.	A11 Amplifier Support Board (Option 040)	8-33
8-234.	A12 Programmable Input Amplifier (Option 040)	8-34
8-239.	A15 Temperature-Controlled 10 MHz Time Base Oscillator (Option 010)	8-34
8-241.	Troubleshooting (Failure Analysis)	8-34
8-245.	Built-In Diagnostics	8-35
8-246.	Introduction	8-35
8-247.	Accessing the Built-In Diagnostics	8-35
8-252.	Shaded Block Diagrams	8-36
8-254.	Diagnostic #1: "Super Check"	8-36
8-267.	Diagnostic #2: Signature Analysis Stimulus Mode	8-39
8-270.	Diagnostic #3 and #4: Front End Latch Control Test	8-39
8-274.	Diagnostic #5: Front End Switch Test	8-39
8-278.	Diagnostic #6: Rear Panel Arm-Slope Switch Test	8-39
8-281.	Diagnostic #7: HP-IB Switch Status	8-44
8-284.	Diagnostic #9: MRC Short Test	8-44

TABLE OF CONTENTS (Continued)

Section	Title	Page
VIII	SERVICE (Continued)	
8-286.	Diagnostic #10: MRC Extended Test	8-47
8-288.	Diagnostics #11, #12, and #13: Interpolator Counters Tests	8-47
8-293.	Diagnostic #14: Front End Check	8-47
8-295.	Diagnostic #15: Front Panel Display Test	8-47
8-297.	Diagnostic #16: HP-IB Address Switch	8-51
8-299.	Diagnostic #17: Keyboard Check	8-51
8-301.	Diagnostic #18 and #19: DAC Adjustment (Option 040)	8-51
8-305.	Diagnostic #20, #21, and #22: DVM Reference Test (Option 020)	8-53
8-308.	Diagnostic #23, #24, and #25: DVM Range Test (Option 020)	8-53
8-310.	Diagnostic #26, #27, and #28: Trigger Level Reference Test	8-53
8-312.	Diagnostic #29 and #30: Trigger Levels A and B Test	8-53
8-314.	Diagnostic #31, #32, #33: A4 DVM Power Supplies Test	8-53
8-316.	Diagnostic #34: Incremental Testing of the DAC's (Option 040)	8-53
8-318.	Overall Troubleshooting	8-56
8-322.	Power-Up Self-Check	8-56
9-331.	Super Check (Diagnostic #01)	8-58
8-336.	Procedure for Inaccessible Diagnostics	8-58
8-338.	Power Supply Test	8-59
8-345.	A2 Troubleshooting	8-60
8-347.	Trigger Level Selector Troubleshooting	8-60
8-351.	Front End Latch Control Troubleshooting	8-61
8-366.	Trigger Level Voltmeter Troubleshooting	8-63
8-373.	Signal Selector Multiplexer Troubleshooting	8-64
8-376.	Prescaler Troubleshooting	8-65
8-378.	A3 Input Amplifier Buffer Troubleshooting	8-65
8-380.	Input Offset Buffer Troubleshooting	8-65
8-384.	Peak Detectors Troubleshooting	8-67
8-388.	A3 Troubleshooting Accessories	8-67
8-390.	A3 Troubleshooting Out-of-Cabinet Setup	8-68
8-391.	Peak Detectors in Manual Mode Troubleshooting	8-68
8-396.	Peak Detectors in Auto Mode Troubleshooting	8-68
8-398.	Schmitt Amplifier Troubleshooting	8-69
8-400.	Bridge Limiter Troubleshooting	8-69
8-404.	A4 Main Logic Troubleshooting	8-69
8-406.	Microprocessor System Troubleshooting	8-69
8-410.	Troubleshooting the A4 Assembly Using "STIMULUS MODE" and Signature Analysis	8-72
8-413.	Signature Analysis of the 5335A in the STIMULUS MODE	8-72
8-415.	START and STOP Interpolators Troubleshooting	8-73
8-423.	Time Base Troubleshooting	8-76
8-425.	4 MHz Microprocess Oscillator Troubleshooting	8-76
8-426.	10 MHz Time Base Oscillator Troubleshooting	8-77
8-427.	Power-Up Rest Troubleshooting	8-77
8-429.	A5 and A10 Keyboard and Display Assemblies Troubleshooting	8-77

TABLE OF CONTENTS (Continued)

Section	Title	Page
VIII	SERVICE (Continued)	
8-436.	A6 Rear Panel Assembly Troubleshooting	8-79
8-438.	GATE OUT Circuitry Troubleshooting	8-79
8-440.	External Arm Input Circuitry Troubleshooting	8-80
8-442.	Time Base Multiplier Troubleshooting	8-80
8-445.	EXTERNAL ARM Switches Troubleshooting	8-81
8-447.	A7 HP-IB Assembly Troubleshooting	8-81
8-450.	A8 Digital Voltmeter Troubleshooting	8-82
8-456.	Input Amplifier and Range Control Troubleshooting	8-84
8-459.	Reference and Voltage Multiplexer Troubleshooting	8-84
8-461.	Voltage-to-Frequency Converter Troubleshooting	8-84
8-463.	Input Logic Switch Control Troubleshooting	8-85
8-466.	Power Supply Troubleshooting	8-85
8-468.	A9 Channel C (Option 030) Troubleshooting	8-85
8-474.	A11 Amplifier Support Troubleshooting	8-87
8-476.	Trigger Level Selector Troubleshooting	8-87
8-479.	Front End Latch Control Troubleshooting	8-87
8-484.	Troubleshooting the A11U5 Multiplexer	8-87
8-488.	Troubleshooting the Relay Drivers	8-88
8-490.	Digital-to-Analog Converter Troubleshooting	8-88
8-496.	Troubleshooting the Data Latch Enablers U19 and U20	8-88
8-500.	Trigger Level Voltmeter Troubleshooting	8-89
8-507.	Signal Selector Multiplexer Troubleshooting	8-90
8-510.	Preset Troubleshooting	8-90
8-512.	A12 Input Amplifier Troubleshooting	8-92
8-514.	Input Offset Buffer Troubleshooting	8-92
8-518.	Peak Detectors Troubleshooting	8-93
8-522.	A12 Troubleshooting Accessories	8-94
8-524.	A12 Troubleshooting Out-of-Cabinet Setup	8-94
8-525.	Troubleshooting Peak Detectors in Manual Mode	8-94
8-530.	Troubleshooting Peak Detectors in Auto Manual	8-94
8-532.	Schmitt Amplifier Troubleshooting	8-95
8-534.	Bridge Limiter Troubleshooting	8-95
8-538.	Diagrams and Photos	8-95

LIST OF TABLES

Table	Title	Page
1-1.	Model 5335A Specifications	1-2
1-2.	Equipment Supplied	1-5
1-3.	Accessories Available	1-5
1-4.	Recommended Test Equipment	1-6
2-1.	Field Installable Options	2-4
3-1.	Function Key Use During Number Entry	3-9
3-2.	Function Key Reference Summary	3-21
3-3.	HP-IB Interface Capability	3-22
3-4.	5335A Bus Message Usage	3-24
3-5.	HP-IB Address Switch Selections	3-25
3-6.	5335A Device Commands	3-28
3-7.	Status Bits Usage with SRQ	3-32
3-8.	HP-IB Response Times	3-33
4-1.	Error Messages	4-1
4-2.	Fail Messages	4-1
4-3.	9825A Verification Program Printout	4-21
4-4.	HP-IB Verification Program Listing (9825A Controller)	4-34
4-5.	5335A HP-IB Verification Program Listing (HP 85A Controller)	4-41
5-1.	Adjustments	5-1
5-2.	Frequency Offset Estimation	5-6
5-3.	Option 050 Adjustments	5-9
6-1.	Abbreviations and Reference Designations	6-2
6-2.	Replaceable Parts	6-3
6-3.	Miscellaneous Replaceable Parts	6-17
6-4.	Option 020 DVM Replaceable Parts	6-28
6-5.	Option 030 "C" Channel Replaceable Parts	6-30
6-6.	Option 040 Programmable Input Replaceable Parts	6-32
6-7.	Manufacturers Code List	6-40
7-1.	Manual Backdating	7-1
7-2.	A6 (05335-60006) Series 1928 Replaceable Parts	7-5
7-3.	A3 Series 2120 or below Selected Components	7-9
7-4.	Selecting A3R7, R8, R80 or R81	7-9
8-1.	Assemblies and Major Parts Usage	8-3
8-2.	General Qualifying Symbols	8-9
8-3.	Qualifying Symbols for Inputs and Outputs	8-11
8-4.	Symbols Inside the Outline	8-12
8-5.	Summary of Dependency Notation	8-13
8-6.	Diagnostics	8-35
8-7.	A1 Power Supply Voltage Tests	8-59
8-8.	A2U2 Analog Multiplexer Control Bits	8-60
8-9.	Troubleshooting A2U12 and A2U15	8-61
8-10.	Troubleshooting A2U16 Signatures	8-62
8-11.	A1U4 Analog Multiplexer Control Bits	8-63

LIST OF TABLES (Continued)

Table	Title	Page
8-12.	U4 Input Voltage with Output Frequency at U8(1)	8-64
8-13.	A2U7 Outputs Related to Control Bits C6, C9, and C10	8-65
8-14.	Peak Detector Control Signals	8-67
8-15.	A4U28 Signatuaires, Logic States, and Voltages	8-70
8-16.	A4 Signatures	8-70
8-17.	A4U23 Signatures	8-71
8-18.	A4U22 Signatures	8-72
8-19.	A5 Keyboard and Display Connector Pins	8-78
8-20.	A6 Rear Panel Board Connector Pins	8-79
8-21.	External Arm Data Lines States	8-81
8-22.	HP-IB Assembly Pin Connections (A4/A7)	8-81
8-23.	HP-IB Assembly Pin Connections (A7/A14)	8-82
8-24.	HP-IB Interface Connector Signal	8-82
8-25.	A8 Connector Pin Functions	8-83
8-26.	A8Q4, Q5, and Q6 States in Diagnostics #23 #24 and #25	8-84
8-27.	A8TP1 Voltages for Diagnostics #23 #24 and #25	8-84
8-28.	A8U7 States in Diagnostics #20-#25	8-84
8-29.	A8 Voltage-to-Frequency Conversion	8-84
8-30.	A8 Input Logic Switching Troubleshooting	8-85
8-31.	A11U2 Analog Multiplexer Control Bits	8-87
8-32.	Troubleshooting A11U14 and A11U15	8-87
8-33.	A11U5 Control Signals	8-88
8-34.	A11 Relay Driver Collector Voltages	8-88
8-35.	A11 Data Latch Logic Levels	8-88
8-36.	A2U4 Analog Multiplexer Control Bits	8-90
8-37.	Input Voltage vs Output Frequency	8-90
8-38.	A11U7 Outputs Related to Control Bits C9 and C10	8-91
8-39.	Peak Detector Control Signals	8-93

LIST OF FIGURES

Figure	Title	Page
1-1.	Model 5335A Universal Counter with Option 040, Option 030, Option 020, Option 010, and Accessories Supplied	1-0
2-1.	Line Voltage Selection	2-1
2-2.	Power Cable HP Part Numbers versus Mains Plugs Available	2-2
2-3.	Hewlett-Packard Interface Bus Connections	2-3
2-4.	Details of Input Connector J1 and Fuse Mounting	2-6
3-1.	Function Group Keys	3-4
3-2.	GATE and CYCLE Controls	3-5
3-3.	INPUT Group Controls	3-6
3-4.	Option 040 INPUT Group Controls	3-6
3-5.	Auto-Triggering Range	3-7
3-6.	Auto Triggering with PRESET Selected	3-8
3-7.	Trigger Indicator Light Response	3-8
3-8.	MATH and FUNCTION Keys	3-8
3-9.	STATISTICS Group Keys	3-10

LIST OF FIGURES (Continued)

Figure	Title	Page
3-10.	INPUT C Control Panel	3-11
3-11.	VOLTS Panel	3-11
3-12.	Front Panel Features	3-12
3-13.	Rear Panel Features	3-12
3-14.	ARMING MODES Timing Diagram	3-13
3-15.	External Arming Signal Enable	3-13
3-16.	Pulsed CW Signal Measurement	3-14
3-17.	Varying Frequency Pulsed CW (Chirp) Signal Measurement	3-14
3-18.	Pulse Distortion from AC Coupling	3-14
3-19.	Advantage of DC Coupling for Pulse Signals	3-15
3-20.	Time Interval Measurement Relationships	3-15
3-21.	Rise Time Measurement	3-15
3-22.	Delayed Time Interval Measurement	3-16
3-23.	Time Interval Between Selected Pulses	3-16
3-24.	Counting Groups of Pulses	3-16
3-25.	Specific Time Interval/Pulse Counting	3-17
3-26.	Frequency Ratio Measurement Connections	3-17
3-27.	Velocity Measurement	3-18
3-28.	Pulse Width Measurement	3-18
3-29.	Waveform Rise and Fall Time Measurement	3-19
3-30.	Duty Cycle Measurements	3-20
3-31.	Voltage Measurement Time	3-20
3-32.	Waveform Phase Relationship	3-46
3-33.	Details of Input Connector J1 and Fuse Mounting	3-48
3-34.	5335A Operating Instructions Label	
4-1.	Front End Input Switch Test Display	4-4
4-2.	Rear Arm Switch Test Display	4-5
4-3.	Keyboard Check Key Assignments	4-5
4-4.	Option 040 DAC Test Setup	4-6
4-5.	Keyboard Check Key Assignments	4-8
4-6.	Rear Arm Switch Test Display	4-9
4-7.	Channel A Frequency Response and Sensitivity Test Setup (20 MHz)	4-10
4-8.	Channel A Frequency Response and Sensitivity Test Setup (200 MHz)	4-11
4-9.	Channel B Frequency Response and Sensitivity Test Setup (20 MHz)	4-12
4-10.	Channel B Frequency Response and Sensitivity Test Setup	4-12
4-11.	Ratio A/B Test Setup (10 Hz to 20 MHz)	4-13
4-12.	Ratio A/B Test Setup (20 MHz to 200 MHz)	4-14
4-13.	Time Interval and Inverse Time Interval Test Setup	4-14
4-14.	Pulse Width A and Pulse Width B Test Setup	4-15
4-15.	Rise and Fall Time A Test Setup	4-16
4-16.	Rise and Fall Time A Test Waveform	4-16
4-17.	Phase A rel B Test Setup	4-17
4-18.	DVM Test Setup (Option 020)	4-18
4-19.	Channel C Test Setup (Option 030)	4-19
4-20.	HP-IB Verification Setup (9825A Controller)	4-20
4-21.	5335A HP-IB Verification Setup (HP 85A Controller)	4-40

LIST OF FIGURES (Continued)

Figure	Title	Page
5-1.	Input Amplifier Adjustment Setup	5-2
5-2.	Input Amplifier Adjust Waveform	5-3
5-3.	Channel C Sensitivity Adjustment Setup	5-5
5-4.	Oscillator Adjustment Setup	5-5
5-5.	Level Shifter Adjustment Setup	5-6
5-6.	Rear Panel Assembly Adjustment Setup	5-8
5-7.	Programmable Input Amplifier Adjustment Setup	5-10
5-8.	Input Amplifier Adjustment Waveform	5-11
5-9.	A12C46 Adjustment Setup	5-12
5-10.	A12C30 Adjustment Test Setup	5-12
5-11.	Peak Detector Adjustment Setup	5-13
6-1.	Cabinet Parts	6-19
6-2.	Top View Parts	6-20
6-3.	View A Parts	6-21
6-4.	View B Parts	6-22
6-5.	View C Parts	6-23
6-6.	View D Parts	6-24
6-7.	Side View Parts	6-25
6-8.	Rear Panel Parts	6-26
6-9.	Bottom View Parts	6-27
7-1.	A6 (05335-60006) Series 1928 Component Locator	7-6
7-2.	A6 (05335-60006) Series 1928 Schematic Diagram	7-7
7-3.	A13 Part Number 0960-0448 Schematic Diagram	7-8
8-1.	Schematic Diagram Notes	8-2
8-2.	Test Setup for A3C37 and C23 Selection	8-7
8-3.	Symbol Composition	8-8
8-4.	Illustration of Common-Control Block	8-8
8-5.	Illustration of Common-Output Element	8-9
8-6.	G Dependency Between Inputs	8-14
8-7.	G Dependency Between Outputs and Inputs	8-14
8-8.	G Dependency with A Dynamic Input	8-14
8-9.	OR'ed Affecting inputs	8-15
8-10.	Substitution for Numbers	8-15
8-11.	V (OR) Dependency	8-15
8-12.	N (Negate, X-OR) Dependency	8-15
8-13.	Z (Interconnection) Dependency	8-16
8-14.	X (Transmission) Dependency	8-17
8-15.	C (Control) Dependency	8-17
8-16.	S (Set) and R (Reset) Dependencies	8-17
8-17.	EN (Enable) Dependency	8-18
8-18.	M (Mode) Dependency	8-18
8-19.	Type of Flip-Flop Determined by Mode	8-19
8-20.	Disabling an Output of the Common Control Block	8-19
8-21.	Determining an Output Function	8-19
8-22.	Dependent Relationship Affected by Mode	8-19

LIST OF FIGURES (Continued)

Figure	Title	Page
8-23.	A (Address) Dependency	8-20
8-24.	RAM Example	8-20
8-25.	Four Types of Bistable Circuits	8-21
8-26.	Coder General Symbol	8-21
8-27.	An X-Y Code Converter	8-21
8-28.	An X-Octal Code Converter	8-22
8-29.	Coder Producing Several Dependencies	8-22
8-30.	Coder Producing One Type of Dependency	8-22
8-31.	Use of Binary Grouping Symbol	8-22
8-32.	Input Labels	8-23
8-33.	Factoring Input Labels	8-23
8-34.	Placement of Three-State Symbols	8-23
8-35.	Output Labels	8-24
8-36.	Factoring Output Labels	8-24
8-37.	Simplified Block Diagram	8-25
8-38.	Trigger Modes Relationships	8-26
8-39.	Peak Detector Simplified Schematic	8-27
8-40.	Interpolator Timing Diagram	8-30
8-41.	Expanded Interpolator Error Pulse	8-30
8-42.	Short and Long Calibration Pulses Example	8-31
8-43.	Diagnostic #01 Shaded Block Diagram	8-38
8-44.	Diagnostic #02 Shaded Block Diagram	8-40
8-45.	Diagnostic #05 Shaded Block Diagram	8-41
8-46.	Diagnostic #05 Display	8-42
8-47.	Diagnostic #06 Display	8-42
8-48.	Diagnostic #06 Shaded Block Diagram	8-43
8-49.	Diagnostic #07 Display	8-44
8-50.	Diagnostics #07 and -16 Shaded Block Diagram	8-45
8-51.	Diagnostics #09 and #10 Shaded Block Diagram	8-46
8-52.	Diagnostics #11, #12, and #13 Shaded Block Diagram	8-48
8-53.	Diagnostic #14 Shaded Block Diagram	8-49
8-54.	Diagnostics #15 and #17 Shaded Block Diagram	8-50
8-55.	Diagnostics #16 Display Example	8-51
8-56.	Diagnostic #17 Keyboard Check Key Assignments	8-51
8-57.	Diagnostics #18 and #19 Shaded Block Diagram	8-52
8-58.	Diagnostics #20 through #25 Shaded Block Diagram	8-54
8-59.	Diagnostics #26 through #33 Shaded Block Diagram	8-55
8-60.	Troubleshooting Flowchart	8-57
8-61.	Power Supply Block Diagram (A1)	8-60
8-62.	Relay Driver A2Q1 Voltage	8-61
8-63.	Diagnostic #5 Display Response	8-62
8-64.	A2U14 Signatures	8-62
8-65.	Trigger Level DVM Block Diagram	8-63
8-66.	Signal Select Block Diagram	8-64
8-67.	Prescaler A2U11 Reset (C6) Voltages	8-65
8-68.	Channel A Input Buffer DC Voltages	8-66
8-69.	Peak Detector Block Diagram A2-A3-A4	8-67
8-70.	Peak Detector Test Signal	8-68
8-71.	A3U6 and A3U1 Pin Voltages	8-68
8-72.	A4 Block Diagram	8-69

LIST OF FIGURES (Continued)

Figure	Title	Page
8-73.	Simplified Interpolators Schematic	8-73
8-74.	Diagnostic 11 Waveform, A4U31 and A4U5	8-74
8-75.	Diagnostic 11 Waveform, A4U4 and A4U5	8-75
8-76.	Diagnostic 12 Waveform, A4U31, A4U5, and A4U4	8-75
8-77.	Diagnostic 12 Waveform, A4U5 and A4U4	8-75
8-78.	Diagnostic 13 Waveform, A4U31 and A4U5	8-76
8-79.	Diagnostic 13 Waveform, A4U4 and A4U5	8-76
8-80.	4 MHz Microprocessor Oscillator Signal	8-76
8-81.	1 MHz Microprocessor Oscillator Signal	8-77
8-82.	10 MHz Timebase Oscillator Signal	8-77
8-83.	Power-Up Reset Circuit Waveform	8-77
8-84.	A5 Keyboard and Display Block Diagram	8-78
8-85.	A6 Rear Panel Block Diagram	8-79
8-86.	Waveform at A6Q4 Base	8-79
8-87.	Waveform at A6Q5 Base	8-79
8-88.	Waveform at A6Q5 Collector (Into 1 Ω)	8-80
8-89.	Waveform at A6Q5 Collector (Into 50 Ω)	8-80
8-90.	A6 External Arm Test Waveforms	8-80
8-91.	A6 Timebase Multiplier Test Waveforms	8-80
8-92.	A7 HP-IB Block Diagram	8-81
8-93.	A8 Digital Voltmeter (Option 020) Block Diagram	8-83
8-94.	A9 Channel C (Option 030) Block Diagram	8-86
8-95.	A9 Waveforms at TP1 and TP3	8-86
8-96.	A11U19 and A11U20 Signatures	8-89
8-97.	Trigger Level DVM Block Diagram	8-89
8-98.	Signal Select Block Diagram	8-91
8-99.	Channel A Input Buffer DC Voltages	8-92
8-100.	Block Diagram of Peak Detectors in A11 and A12	8-93
8-101.	Peak Detectors Test Signal	8-94
8-102.	A12U6 and A12U1 Pin Voltages	8-95
8-103.	5335A Block Diagram with Options 010, 020, and 030	8-97
8-104.	5335A Block Diagram with Option 040	8-99
8-105.	Assembly and Cable Locator with Options 010, 020, and 030	8-101
8-106.	Assembly and Cable Locator with Option 040	8-103
8-107.	A1 Power Supply Assembly and A13 Line Module	8-105
8-108.	A2 Amplifier Supply Assembly	8-107
8-109.	A3 Amplifier Buffer Assembly	8-109
8-110.	A4 Main Logic Assembly	8-111
8-111.	A5 Keyboard and Display Assembly	8-113
8-112.	A6 Rear Panel Assembly	8-115
8-113.	A7 HP-IB Logic Assembly and A14 HP-IB Connector Assembly	8-117
8-114.	A8 Digital Voltmeter (Option 020) Assembly	8-119
8-115.	A9 Channel C (Option 030) Assembly	8-121
8-116.	A10 Switch Panel (Option 040) Assembly	8-123
8-117.	A11 Amplifier Support (Option 040) Assembly	8-127
8-118.	A12 Programmable Input Amplifier (Option 040) Assembly	8-129
8-119.	A15 10 MHz Oscillator (Option 010) Assembly	8-131
8-120.	A16 Service Aid Board	8-132
8-121.	A17 Shield Board (Option 040)	8-133