

OPERATING AND PROGRAMMING MANUAL

HP8154B LED-SOURCES

OPTION 001 850nm

OPTION 002 1300nm

OPTION 003 1550nm

SERIAL NUMBERS

This manual applies directly to instruments with serial number 2550G00101 and higher for option 002, and serial number 2550G00286 and higher for options 001 and 003. Any change made in instruments having serial numbers higher than the above numbers will be found in a "Manual Changes" supplement supplied with this manual. Be sure to examine the supplement for changes which apply to your instrument and record these changes in the manual.

© HEWLETT-PACKARD GMBH 1986
HERRENBERGER STR. 130, D-7030 BOBLINGEN
FEDERAL REPUBLIC OF GERMANY

CONTENTS

| SECTION | Page |
|---|------|
| 1 GENERAL INFORMATION | |
| 1.1 INTRODUCTION | 1-1 |
| 1.2 SPECIFICATIONS | 1-1 |
| 1.3 SAFETY CONSIDERATIONS | 1-1 |
| 1.4 INSTRUMENTS COVERED BY THIS MANUAL | 1-1 |
| 1.5 DESCRIPTION | 1-1 |
| 1.6 ACCESSORIES SUPPLIED | 1-2 |
| 1.7 ACCESSORIES AVAILABLE | 1-2 |
| 2 INSTALLATION | |
| 2.1 INTRODUCTION | 2-1 |
| 2.2 INITIAL INSPECTION | 2-1 |
| 2.3 PREPARATION FOR USE | 2-1 |
| 2.4 Power Requirements | 2-1 |
| 2.5 Line Voltage Selection | 2-1 |
| 2.6 Power Cable | 2-2 |
| 2.7 HP-IB Connector | 2-3 |
| 2.8 HP-IB Logic Levels | 2-3 |
| 2.9 OPERATING ENVIRONMENT | 2-3 |
| 2.10 CLAIMS AND REPACKAGING | 2-4 |
| 2.11 STORAGE AND SHIPMENT | 2-4 |
| 3 OPERATING AND PROGRAMMING | |
| 3.1 INTRODUCTION | 3-1 |
| 3.2 SPECIAL OPERATING CONSIDERATIONS | 3-1 |
| 3.3 GETTING TO KNOW YOUR INSTRUMENT | 3-1 |
| 3.4 SETTING THE LED-SOURCE | 3-2 |
| 3.5 ... for CW Optical Output | 3-2 |
| 3.6 ... for Internally Modulated Optical Output | 3-2 |
| 3.7 ... for Externally Modulated Optical Output | 3-3 |
| 3.8 ROUTINE MAINTENANCE | 3-3 |
| 3.9 Cleaning Procedure | 3-3 |
| PROGRAMMING | 3-4 |
| 3.10 WHAT YOU NEED TO KNOW ... | 3-4 |
| 3.11 ... About The HP8154B's HP-IB Capabilities | 3-4 |
| 3.12 ... About Programming Examples in This Section | 3-4 |
| 3.13 GETTING STARTED | 3-5 |
| 3.14 Setting The Address | 3-5 |
| 3.15 Checking Remote Operation | 3-5 |

CONTENTS (CONTD)

| SECTION | Page |
|--|------|
| 3 OPERATING AND PROGRAMMING (CONTD) | |
| 3.16 SENDING DATA TO THE HP8154B (LISTENER FUNCTION) | 3-6 |
| 3.17 RECEIVING DATA FROM THE HP8154B (TALKER FUNCTION) | 3-6 |
| 3.18 STATUS/ERROR REPORTING (TALKER FUNCTION) | 3-6 |
| 3.19 Status Register and Status Byte | 3-7 |
| 3.20 Setting The SRQ Mask | 3-7 |
| COMMAND SUMMARY | 3-8 |
| 4 PERFORMANCE TESTS | |
| 4.1 INTRODUCTION | 4-1 |
| 4.2 EQUIPMENT REQUIRED | 4-1 |
| 4.3 TEST RECORD | 4-2 |
| 4.4 TEST FAILURE | 4-2 |
| 4.5 INSTRUMENT SPECIFICATIONS | 4-2 |
| 4.6 PERFORMANCE TESTS | 4-2 |
| 4.7 Output Power and Stability Tests | 4-3 |

TABLES

| TABLE | Page |
|---------------------------------|------|
| 1-1 SPECIFICATIONS | 1-3 |
| 3-1 HP-IB CAPABILITIES | 3-4 |
| 4-1 RECOMMENDED TEST EQUIPMENT | 4-1 |
| PERFORMANCE TEST RECORD HP8154B | 4-4 |

FIGURES

| FIGURE | Page |
|--------------------------------------|------|
| 2-1 LINE VOLTAGE SWITCH ASSEMBLY | 2-2 |
| 2-2 POWER CABLES-PLUG IDENTIFICATION | 2-2 |
| 2-3 HP-IB CONNECTOR | 2-3 |
| 3-1 FRONT AND REAR PANELS | 3-0 |
| 4-1 OUTPUT POWER AND STABILITY TESTS | 4-3 |