

CONTENTS

VOLUME 1

Page

Page

Section I GENERAL INFORMATION

Introduction	1-1
Specifications	1-1
Safety Considerations	1-1
Instruments Covered By This Manual	1-2
Description	1-2
Carrier Frequency	1-2
Output Amplitude	1-2
Modulation Capabilities	1-2
Options	1-3
Electrical Options	1-3
Mechanical Options	1-3
Rear-Panel Inputs and Outputs Option 002	1-3
Front Handle Kit Option 907	1-3
Rack Flange Kit Option 908	1-3
Rack Flange and Front Handle Combination Kit Option 909	1-3
Hewlett-Packard Interface Bus	1-3
Compatibility	1-3
Selecting the HP-IB Address	1-3
Accessories Supplied	1-4
Recommended Test Equipment	1-4

Section II INSTALLATION

Introduction	2-1
Initial Inspection	2-1
Preparation for Use	2-1
Power Requirements	2-1
Line Voltage and Fuse Selection	2-2
Power Cables	2-3
Time Base Selection	2-3
HP-IB Address Selection	2-5
Interconnection	2-6
Mating Connectors	2-6
Coaxial Connectors	2-6
Interface Connector	2-6
Operating Environment	2-6
Bench Operation	2-6
Rack Mounting	2-6
Storage and Shipment	2-9
Environment	2-9
Packaging	2-9
Original Packaging	2-9
Other Packaging	2-9

Section III OPERATION

Introduction	3-1
Operating Characteristics	3-1
Local Operation	3-1
General Operating Instructions	3-1
Simplified Front-Panel Features and Operation	3-1

Detailed Operating Instructions	3-1
Operator's Checks	3-1
Basic Functional Checks	3-1
HP-IB Functional Checks	3-1
Remote Operation	3-2
Operator's Maintenance	3-2
General Operating Instructions	3-2
Power-On Procedure	3-2
Power-On Sequence	3-3
Power STBY Sequence	3-3
Front-Panel Features	3-4
Keystroke Sequence	3-9
Carrier Keystroke Sequence	3-9
Modulation Keystroke Sequence	3-10
Store-Recall Display Keystroke Sequence	3-10
Time Base Selection	3-10
Rear-Panel Features	3-10
Operator's Maintenance	3-10
Operator's Checks	3-11
Basic Functional Checks	3-11
Frequency Check	3-12
Output Level Checks	3-13
FM Check	3-14
DC FM Check	3-14
AM Check	3-14
HP-IB Functional Checks	3-15
Address Recognition	3-16
Remote and Local Messages and the LOCAL Key	3-16
Data Message	3-17
Local Lockout and Clear Lockout/ Set Local Messages	3-17
Clear Message	3-18
Abort Message	3-18
Remote Operation, Hewlett-Packard Interface Bus	3-20
HP-IB Compatibility	3-20
Remote Operation	3-20
Remote Capability	3-20
Local-to-Remote Change	3-20
Local Operation	3-20
Local Capability	3-20
Remote-to-Local Change	3-20
Local Lockout	3-20
Addressing	3-22
Data Messages	3-22
Receiving the Data Message	3-23
Data Message Input Format	3-23
Keyboard-to-Program Code Correlation	3-23
Value-Selectable Parameters	3-23
Data	3-23
Sending the Data Message	3-23
Receiving the Trigger Message	3-23
Receiving the Clear Message	3-24
Receiving the Remote Message	3-25
Receiving the Local Message	3-25
Receiving the Local Lockout Message	3-25

CONTENTS (Cont'd)

	<u>Page</u>		<u>Page</u>
Receiving the Clear Lockout/ Set Local Message	3-26	Section V	
Receiving the Pass Control Message	3-27	ADJUSTMENTS	
Sending the Require Service Message	3-27	Introduction	5-1
Sending the Status Byte Message	3-27	Safety Considerations	5-1
Sending the Status Bit Message	3-27	Equipment Required	5-1
Receiving the Abort Message	3-27	Factory-Selected Components	5-1
Switching Characteristics	3-28	Post Repair Adjustments	5-2
Frequency Switching	3-28	Related Adjustments	5-3
Amplitude Switching	3-28	Power Supply Voltage Adjustment	5-4
Modulation Switching	3-28	Reference Voltage Adjustment	5-5
Introduction to the		Audio Oscillator Level Adjustment	5-6
Detailed Operating Instructions	3-30	AM Offset Adjustment	5-7
Amplitude	3-31	715 MHz Sideband Adjustment	5-9
Amplitude Conversion	3-33	Notch Filter Adjustments	5-11
Amplitude Offset	3-35	High Frequency Loop Offset Adjustment	5-14
Amplitude Up/Down	3-36	50 MHz Reference Oscillator Frequency	
Display Amplitude Offset	3-37	Adjustment	5-16
Display	3-38	50 MHz Reference Oscillator Level Adjustment	5-17
Display Sequence	3-39	60 to 110 MHz Oscillator Flatness Adjustment	5-19
Frequency	3-40	690 to 740 MHz IF Compensation Adjustment	5-21
Frequency, Coarse and Fine Tune	3-42	400 MHz Bandpass Filter Adjustment	5-23
Frequency, Phase Up/Down	3-43	Level and ALC Loop Detector Adjustments	5-24
Frequency, Up/Down	3-44	Heterodyne Band Accuracy and	
HP-IB Address Display	3-46	Flatness Adjustments	5-26
Increment Value Change	3-48	AM% and ALC Loop AM Adjustments	5-28
Increment Value Display	3-50	FM Deviation Adjustment	5-30
Instrument Preset	3-52	FM Calibration Pretune Adjustment	5-32
Modulation, AM	3-53	API 1, 2, 3, and 4 Adjustments	5-34
Modulation, AM Up/Down	3-55	Pedestal Adjustment	5-36
Modulation, DC FM	3-57	DC FM Adjustment	5-38
Modulation, DC FM Up/Down	3-59	FM In-Band Gain Adjustment	5-40
Modulation, External Source	3-60	Voltage Offset Adjustment	5-42
Modulation, FM	3-61	DC FM Offset Adjustment	5-43
Modulation, FM Up/Down	3-63	Option 001 10 MHz Reference Oscillator	
Modulation, Mixed	3-65	Frequency Adjustment	5-44
Modulation, Off	3-69		
RF Off/On	3-71	Section VI	
Recall	3-72	REPLACEABLE PARTS	
Sequence	3-73	Introduction	6-1
Store	3-73	Abbreviations	6-1
		Replaceable Parts	6-1
Section IV		Factory Selected Parts (*)	6-1
PERFORMANCE TESTS		Parts List Updating	6-2
Introduction	4-1	Illustrated Parts Breakdowns	6-2
Equipment Required	4-1	Ordering Information	6-2
Performance Test Record	4-1	Recommended Spares List	6-2
Calibration Cycle	4-2		
Abbreviated Performance Testing	4-2	Section VII	
Test Procedures	4-2	INSTRUMENT CHANGES	
Spectral Purity Tests	4-4	Introduction	7-1
Output Level Accuracy and Flatness Tests	4-14		
Modulation Tests	4-17		
Output Leakage Tests	4-29		
SWR Test	4-31		

CONTENTS (Cont'd)

VOLUME 2	Page	Page	
Section VIII			
SERVICE			
Introduction	8-1	Manual Updating (Manual Changes Supplement)	8-16
Service Sheets	8-1	Etched Circuits (Printed Circuit Boards)	8-16
Principles of Operation	8-1	MOS and CMOS Integrated Circuit Replacement	8-16
Troubleshooting	8-1	Retrofitting Option 001	8-17
Block Diagrams	8-1	Schematic Symbolology and Operating Principles	8-17
Circuit Schematic Diagrams	8-1	Schematic Diagram Notes	8-17
Safety Considerations	8-2	Basic Logic Symbolology	8-17
Before Applying Power	8-2	Gates and Qualifiers	8-17
Warnings and Cautions	8-2	Indicator Symbols	8-21
Special Handling Considerations for Static Sensitive Devices	8-3	Dependency Notation	8-21
General	8-3	Common Control Block	8-21
Description	8-3	Complex Device Symbolology	8-21
Device Classes	8-4	Shift Register	8-21
Component Handling Precautions	8-4	Up/Down Counter	8-21
Recommended Test Equipment and Accessories	8-4	Quad D-Type Latch	8-21
Service Tools, Aids and Information	8-5	Analog Switch	8-21
Service Tools	8-5	Complex Logic Symbolology and Operating Principles	8-23
Pozidrive Screw Drivers	8-5	Microprocessor	8-23
Tuning Tools	8-5	Random Access Memory (RAM)	8-23
Heat Staking Tool	8-5	Read Only Memory (ROM)	8-23
Parts and Cable Locations	8-6	Multiple Bus Transceivers	8-24
Test Points and Adjustment Locations	8-6	General Purpose Interface Adapter (GPIO)	8-24
Service Aids on Printed Circuit Boards	8-6	BDC-to-Seven-Segment Latch/Decoder/Driver	8-25
Other Service Documentation	8-6	Linear Device Operating Principles	8-25
Troubleshooting	8-6	Operational Amplifiers	8-25
General	8-6	Comparators	8-26
Operator Error	8-6	Service Sheet BD1 Model 8656B Signal Generator Principles of Operation	8-37
Instrument Out of Specification	8-7	Troubleshooting	8-41
Catastrophic Failure	8-7	Service Sheet BD2 High Frequency and Output Section Principles of Operation	8-45
Strategy	8-7	Troubleshooting	8-49
Overall Troubleshooting (Service Sheet BD1)	8-8	Service Sheet BD3 Low Frequency and FM Section Principles of Operation	8-53
Functional Section Troubleshooting (Service Sheets BD2-BD4)	8-8	Troubleshooting	8-63
Circuit Troubleshooting (Service Sheets 1-25)	8-8	Service Sheet BD4 Microprocessor, Keyboard and Display Section Principles of Operation	8-69
Signature Analysis	8-8	Troubleshooting	8-71
Additional Information	8-9	Service Sheet 1 High Frequency Oscillator and IF Principles of Operation	8-73
Repair	8-9	Troubleshooting	8-77
Disassembly Procedures	8-9	Service Sheet 2 High Frequency Loop Amplifier and Control Principles of Operation	8-83
Front-Panel Removal	8-9	Troubleshooting	8-87
A1 Keyboard and A2 Display Assembly Removal	8-9	Troubleshooting Using Signature Analysis	8-89
Cover Removal, Top and Bottom (Levels 1 and 4 Access)	8-11	Service Sheet 3 Frequency Multiplier Principles of Operation	8-93
A3 Assembly Service Position	8-11	Troubleshooting	8-95
Level 2 Access	8-11		
A10/A11 Assemblies Service Position	8-11		
Level 3 Access	8-11		
Rear-Panel Removal	8-12		
Fan Shroud Removal	8-12		
Replacement of Key Cap and Pushbutton Switches	8-14		
Key Cap Replacement	8-14		
Switch Replacement	8-14		
Factory-Selected Components (*)	8-15		

CONTENTS (Cont'd)

	Page		Page
Service Sheet 4 Output		Troubleshooting	8-197
Principles of Operation	8-99	Service Sheet 15 Low Frequency Loop In-Band	
Troubleshooting	8-103	Frequency Modulation	
Service Sheet 5 Heterodyne and Output Control		Principles of Operation	8-201
Principles of Operation	8-109	Troubleshooting	8-207
Troubleshooting	8-111	Service Sheet 16 Low Frequency Loop 50 MHz	
Troubleshooting Using Signature Analysis	8-115	Reference Oscillator and Phase Lock Loop	
Service Sheet 6 Modulation Control Latches		Principles of Operation	8-213
and Mode Select		Troubleshooting	8-215
Principles of Operation	8-117	Service Sheet 17 Microprocessor Interrupt	
Troubleshooting	8-121	Processing and Restart	
Troubleshooting Using Signature Analysis	8-123	Principles of Operation	8-217
Service Sheet 7 FM and AM Modulation Control		Troubleshooting Using Signature Analysis	8-223
and RF Amplitude Control		Service Sheet 18 Address Buffering and	
Principles of Operation	8-127	Decoding, Serial I/O and Control	
Troubleshooting	8-131	Principles of Operation	8-227
Service Sheet 8 Attenuator, Attenuator Control		Troubleshooting Using Signature Analysis	8-229
and Reverse Power Protection		Service Sheet 19 Memory	
Principles of Operation	8-135	Principles of Operation	8-233
Troubleshooting	8-137	Troubleshooting	8-235
Troubleshooting Using Signature Analysis	8-141	Service Sheet 20 HP-IB Interface	
Service Sheet 9 Low Frequency Loop Voltage		Principles of Operation	8-241
Controlled Oscillator		Troubleshooting Using Signature Analysis	8-243
Principles of Operation	8-145	Service Sheet 21 Keyboard and Encoder	
Troubleshooting	8-147	Principles of Operation	8-245
Service Sheet 10 Low Frequency Loop Divide-by-2		Troubleshooting	8-247
and Prescaler		Troubleshooting Using Keyboard-Invoked	
Principles of Operation	8-149	Test 4 or Using Signature	
Troubleshooting	8-153	Analysis	8-249
Service Sheet 11 Low Frequency Loop Fractional-N,		Service Sheet 22 Display Control	
Divide-by-N and Digital Timing Logic		Principles of Operation	8-253
Principles of Operation	8-157	Troubleshooting	8-255
Troubleshooting	8-165	Troubleshooting Using Signature Analysis	8-257
Service Sheet 12 Low Frequency Loop Analog		Service Sheet 23 Frequency Displays	
Phase Interpolation (API), Current Sources,		Principles of Operation	8-263
Current Summing and Bias		Troubleshooting	8-265
Principles of Operation	8-171	Troubleshooting Using Signature Analysis	8-267
Troubleshooting	8-175	Service Sheet 24 Amplitude, Modulation and	
Service Sheet 13 Low Frequency Loop Phase		Annunciator Displays	
Detector, Integrator and Sample and Hold		Principles of Operation	8-271
Principles of Operation	8-177	Troubleshooting	8-275
Troubleshooting	8-187	Troubleshooting Using Signature Analysis	8-277
Service Sheet 14 Low Frequency Loop Frequency		Service Sheet 25 Power Supply	
Modulation Calibration		Principles of Operation	8-281
Principles of Operation	8-193	Troubleshooting	8-283

ILLUSTRATIONS

Figure	Page	Figure	Page
2-1. Line Voltage and Fuse Selection	2-2	3-1. Simplified Front-Panel Features	
2-2. Time Base Jumper Location	2-7	and Operation	3-5
2-3. HP-IB Address Switch Location		3-2. Rear-Panel Features	3-8
and Settings	2-7	3-3. Test Setup for Basic Functional Checks	3-11
2-4. Hewlett-Packard Interface Bus Connections	2-8	3-4. FM Functional Check Waveform	3-14

ILLUSTRATIONS (Cont'd)

Figure	Page	Figure	Page
3-5. Data Message Examples	3-24	6-3. Rear-Panel, Parts Identification	6-78
3-6. Frequency Switching Characteristics	3-30	6-4. Low Frequency Loop Assembly— A3, Parts Identification	6-79
4-1. Spurious Signals Test Setup	4-6	6-5. Top Internal View; Top Cover Removed	6-80
4-2. Modulation Analyzer Residual AM Verification Test Setup	4-7	6-6. Top Internal View; A3 Assembly in Service Position	6-81
4-3. Residual AM Test Setup	4-9	6-7. Bottom Internal View; A10/A11 Assemblies in Service Position	6-82
4-4. Residual FM Test Setup	4-10	6-8. Bottom Internal View; Bottom Cover Removed	6-83
4-5. SSB Phase Noise Test Setup	4-11	8-1. Recommended Position for Maintenance and Servicing	8-5
4-6. 1 MHz Low-Pass Filter	4-13	8-2. Rear-Panel and Fan Shroud Removal	8-13
4-7. Output Level Accuracy and Flatness Test Setup	4-14	8-3. Front-Panel Pushbutton Switch Assembly	8-13
4-8. Modulation Test Setup	4-19	8-4. Pushbutton Switch Support Anvil	8-13
4-9. Modulation Analyzer Incidental AM Verification Test Setup	4-24	8-5. Heat Staking Tip	8-15
4-10. DC FM Test Setup	4-27	8-6. Typical Assembly for Heat Staking Operation	8-15
4-11. Output Leakage Test Setup	4-29	8-7. Basic Logic Symbols and Qualifiers	8-18
4-12. SWR Performance Test Setup (Out of Band)	4-31	8-8. Indicator Symbols	8-19
5-1. 5.4 Vdc Power Supply Adjustment Setup	5-4	8-9. Dependency Notation	8-20
5-2. +2 Vdc Reference Adjustment Setup	5-5	8-10. Common Control Block	8-22
5-3. Audio Oscillator Level Adjustment Setup	5-6	8-11. Shift Register	8-22
5-4. AM Offset Adjustment Setup	5-7	8-12. Up/Down Counter	8-22
5-5. 715 MHz Sideband Adjustment Setup	5-9	8-13. Quad D-Type Latch	8-22
5-6. Notch Filters Adjustment Setup	5-11	8-14. Analog Switch	8-22
5-7. High Frequency Loop Offset Adjustment Setup	5-14	8-15. Random Access Memory	8-23
5-8. Tune Voltage Waveform	5-15	8-16. Read Only Memory	8-23
5-9. 50 MHz Reference Oscillator Frequency Adjustment Setup	5-16	8-17. Multiple Bus Transceiver With 3-State Output	8-24
5-10. 50 MHz Reference Oscillator Level Adjustment Setup	5-17	8-18. General Purpose Interface Adapter (GPIA)	8-24
5-11. 60 to 110 MHz Oscillator Flatness Adjustment Setup	5-19	8-19. BDC-to-Seven-Segment Latch/Decoder/Divider	8-25
5-12. 690 to 740 MHz IF Compensation Adjustment Setup	5-21	8-20. Non-Inverting Amplifier (Gain=1)	8-26
5-13. 400 MHz Bandpass Filter Adjustment Setup	5-23	8-21. Non-Inverting Amplifier (Gain=1+R1/R2)	8-26
5-14. Level and ALC Loop Detector Adjustment Setup	5-24	8-22. Inverting Amplifier (Gain=-R1/R2)	8-26
5-15. Heterodyne Band Accuracy and Flatness Adjustment Setup	5-26	8-23. Non-Inverting Comparator	8-27
5-16. AM% and ALC Loop AM Adjustment Setup	5-28	8-24. Inverting Comparator	8-27
5-17. FM Deviation Adjustment Setup	5-30	8-25. BD1	8-801/802
5-18. FM Calibration Pretune Adjustment Setup	5-32	8-26. BD2	8-803/804
5-19. API 1, 2, 3, and 4 Adjustment Setup	5-34	8-27. BD3	8-805/806
5-20. Pedestal Adjustment Setup	5-36	8-28. BD4	8-807
5-21. Oscilloscope Display with Pedestal Needing Adjustment	5-37	8-29. Service Sheet 1 Information	8-808
5-22. DC FM Adjustment	5-38	8-30. Service Sheet 1 Schematic Diagram	8-809
5-23. FM In-Band Gain Adjustment Setup	5-40	8-31. Service Sheet 2 Information	8-810
5-24. DC FM Offset Adjustment Setup	5-42	8-32. Service Sheet 2 Schematic Diagram	8-811
5-25. DC FM Frequency Offset Adjustment	5-43	8-33. Service Sheet 3 Information	8-812
5-26. 10 MHz Reference Oscillator Frequency Adjustment Setup	5-44	8-34. Service Sheet 3 Schematic Diagram	8-813
6-1. Cabinet, Parts Identification	6-76	8-35. Service Sheet 4 Information	8-814
6-2. Front-Panel, Parts Identification	6-77	8-36. Service Sheet 4 Schematic Diagram	8-815
		8-37. Service Sheet 5 Information	8-816
		8-38. Service Sheet 5 Schematic Diagram	8-817
		8-39. Service Sheet 6 Information	8-818
		8-40. Service Sheet 6 Schematic Diagram	8-819
		8-41. Service Sheet 7 Information	8-820
		8-42. Service Sheet 7 Schematic Diagram	8-821
		8-43. Service Sheet 8 Information	8-822
		8-44. Service Sheet 8 Schematic Diagram	8-822

ILLUSTRATIONS (Cont'd)

Figure	Page	Figure	Page
8-45. Service Sheet 9 Information	8-823	8-62. Service Sheet 17 Schematic Diagram	8-840
8-46. Service Sheet 9 Schematic Diagram	8-824	8-63. Service Sheet 18 Information	8-841
8-47. Service Sheet 10 Information	8-825	8-64. Service Sheet 18 Schematic Diagram	8-842
8-48. Service Sheet 10 Schematic Diagram	8-826	8-65. Service Sheet 19 Information	8-843
8-49. Service Sheet 11 Information	8-827	8-66. Service Sheet 19 Schematic Diagram	8-844
8-50. Service Sheet 11 Schematic Diagram	8-828	8-67. Service Sheet 20 Information	8-845
8-51. Service Sheet 12 Information	8-829	8-68. Service Sheet 20 Schematic Diagram	8-846
8-52. Service Sheet 12 Schematic Diagram	8-830	8-69. Service Sheet 21 Information	8-847
8-53. Service Sheet 13 Information	8-831	8-70. Service Sheet 21 Schematic Diagram	8-848
8-54. Service Sheet 13 Schematic Diagram	8-832	8-71. Service Sheet 22 Information	8-849
8-55. Service Sheet 14 Information	8-833	8-72. Service Sheet 22 Schematic Diagram	8-850
8-56. Service Sheet 14 Schematic Diagram	8-834	8-73. Service Sheet 23 Information	8-851
8-57. Service Sheet 15 Information	8-835	8-74. Service Sheet 23 Schematic Diagram	8-852
8-58. Service Sheet 15 Schematic Diagram	8-836	8-75. Service Sheet 24 Information	8-853
8-59. Service Sheet 16 Information	8-837	8-76. Service Sheet 24 Schematic Diagram	8-854
8-60. Service Sheet 16 Schematic Diagram	8-838	8-77. Service Sheet 25 Information	8-855
8-61. Service Sheet 17 Information	8-839	8-78. Service Sheet 25 Schematic Diagram	8-856

TABLES

Table	Page	Table	Page
1-1. Specifications	1-5	3-9. HP-IB Program Codes (Alphabetical Order)	3-26
1-2. Supplemental Characteristics	1-8	3-10. HP-IB Program Codes (Functional Order) ..	3-27
1-3. Recommended Test Equipment	1-9	3-11. Commonly Used Code Conversions	3-29
1-4. Alternate Test Equipment	1-11	4-1. Abbreviated Performance Tests	4-3
2-1. Line Fuse Ratings and Part Numbers	2-3	4-2. Performance Test Record	4-36
2-2. AC Power Cables Available	2-4	5-1. Factory Selected Components	5-2
2-3. Allowable HP-IB Address Codes	2-5	5-2. Post-Repair Adjustments	5-3
3-1. Power-On Error Codes	3-3	6-1. Reference Designations	6-3
3-2. Initialized Conditions	3-3	6-2. Abbreviations	6-3
3-3. Operating Characteristics	3-4	6-3. Replaceable Parts	6-5
3-4. Index of Detailed Operating Instructions	3-9	6-4. Code List of Manufacturers	6-75
3-5. HP-IB Message Reference Table	3-21	8-1. Assembly Access Information	8-10
3-6. Valid Decimal Values vs. Equivalent ASCII Characters	3-22	8-2. Etched Circuit Soldering Equipment	8-17
3-7. Input Data Restrictions	3-24	8-3. Schematic Diagram Notes	8-28
3-8. Response to Clear Message	3-25		

SERVICE SHEETS

	Assembly	Schematic Service Sheet Number	Block Diagram	Principles of Operation Page No.	Troubleshooting Page No.	Parts List Page No.
A1	Keyboard Assembly (08656-60134)	21	BD4	8-69, 245	8-71, 247	6-5
A2	Display Assembly (08656-60126)	21-24	BD4	8-69, 245, 253, 263, 271	8-71, 247, 255, 265, 275	6-7
A3	Low Frequency Loop Assembly (08656-60129)	10-16	BD3	8-53, 149, 157 171, 177, 193, 201, 213	8-63, 153, 165, 175, 187, 197, 207, 215	6-11
A3A1	Low Frequency Oscillator (08656-60137)	9	BD3	8-53, 145	8-63, 147	6-23
A4	High Frequency Loop Assembly (08656-60001)	1, 2	BD2	8-45, 73, 83	8-49, 77, 87	6-25
A5	High Frequency Oscillator Assembly (08656-60013)	1	BD2	8-46, 73	8-49, 77	6-31
A6	Output Assembly (08656-60150)	4, 5, 8	BD2	8-46, 99, 109, 135	8-50, 103, 111, 137	6-33
A7	RFI Assembly (08656-60063)	4, 5, 17	—	—	—	6-39
A8	Frequency Multiplier Assembly (08656-60004)	3	BD2	8-45, 93	8-51, 95	6-41
A9	Attenuator Replacement Kit (08656-60105)	8	BD2	8-46, 135	8-49, 137	6-45
A10	Audio/Power Supply Assembly (08656-60128)	6-8, 25	BD2	8-47, 117, 127, 135, 281	8-51, 121, 131, 137, 283	6-47
A11	Microprocessor/Memory/HP-IB (08656-60127)	17-20	BD4	8-69, 217, 227, 233, 241	8-71, 223, 229, 235, 243	6-53
A12	Voltage Regulator Assembly (08656-60016)	25	—	—	—	6-55
A13	HP-IB Connector Assembly (08656-60136)	20	BD4	—	—	6-57
A14	Filter Bank Assembly (08656-60135)	17, 25	—	—	—	6-59
A15	Line Power Module (0960-0443)	25	—	—	—	6-61
A16	10 MHz Reference Oscillator Assembly (0950-0441)	25	—	—	—	6-63
A17	Front Feedthru Assembly (08656-60081)	7, 21, 25	—	—	—	6-65
A18	Front (F) Feedthru Assembly (08656-60113)	21	—	—	—	6-67
A19	Rear Feedthru Assembly (08656-60122)	5, 6, 17, 25	—	—	—	6-69

CONTENTS

VOLUME 1

Page

Page

Section I GENERAL INFORMATION

Introduction	1-1
Specifications	1-1
Safety Considerations	1-1
Instruments Covered By This Manual	1-2
Description	1-2
Carrier Frequency	1-2
Output Amplitude	1-2
Modulation Capabilities	1-2
Options	1-3
Electrical Options	1-3
Mechanical Options	1-3
Rear-Panel Inputs and Outputs Option 002	1-3
Front Handle Kit Option 907	1-3
Rack Flange Kit Option 908	1-3
Rack Flange and Front Handle Combination Kit Option 909	1-3
Hewlett-Packard Interface Bus	1-3
Compatibility	1-3
Selecting the HP-IB Address	1-3
Accessories Supplied	1-4
Recommended Test Equipment	1-4

Section II INSTALLATION

Introduction	2-1
Initial Inspection	2-1
Preparation for Use	2-1
Power Requirements	2-1
Line Voltage and Fuse Selection	2-2
Power Cables	2-3
Time Base Selection	2-3
HP-IB Address Selection	2-5
Interconnection	2-6
Mating Connectors	2-6
Coaxial Connectors	2-6
Interface Connector	2-6
Operating Environment	2-6
Bench Operation	2-6
Rack Mounting	2-6
Storage and Shipment	2-9
Environment	2-9
Packaging	2-9
Original Packaging	2-9
Other Packaging	2-9

Section III OPERATION

Introduction	3-1
Operating Characteristics	3-1
Local Operation	3-1
General Operating Instructions	3-1
Simplified Front-Panel Features and Operation	3-1

Detailed Operating Instructions	3-1
Operator's Checks	3-1
Basic Functional Checks	3-1
HP-IB Functional Checks	3-1
Remote Operation	3-2
Operator's Maintenance	3-2
General Operating Instructions	3-2
Power-On Procedure	3-2
Power-On Sequence	3-3
Power STBY Sequence	3-3
Front-Panel Features	3-4
Keystroke Sequence	3-9
Carrier Keystroke Sequence	3-9
Modulation Keystroke Sequence	3-10
Store-Recall Display Keystroke Sequence	3-10
Time Base Selection	3-10
Rear-Panel Features	3-10
Operator's Maintenance	3-10
Operator's Checks	3-11
Basic Functional Checks	3-11
Frequency Check	3-12
Output Level Checks	3-13
FM Check	3-14
DC FM Check	3-14
AM Check	3-14
HP-IB Functional Checks	3-15
Address Recognition	3-16
Remote and Local Messages and the LOCAL Key	3-16
Data Message	3-17
Local Lockout and Clear Lockout/ Set Local Messages	3-17
Clear Message	3-18
Abort Message	3-18
Remote Operation, Hewlett-Packard	
Interface Bus	3-20
HP-IB Compatibility	3-20
Remote Operation	3-20
Remote Capability	3-20
Local-to-Remote Change	3-20
Local Operation	3-20
Local Capability	3-20
Remote-to-Local Change	3-20
Local Lockout	3-20
Addressing	3-22
Data Messages	3-22
Receiving the Data Message	3-23
Data Message Input Format	3-23
Keyboard-to-Program Code Correlation	3-23
Value-Selectable Parameters	3-23
Data	3-23
Sending the Data Message	3-23
Receiving the Trigger Message	3-23
Receiving the Clear Message	3-24
Receiving the Remote Message	3-25
Receiving the Local Message	3-25
Receiving the Local Lockout Message	3-25

CONTENTS (Cont'd)

	<u>Page</u>		<u>Page</u>
Receiving the Clear Lockout/ Set Local Message	3-26	Section V	
Receiving the Pass Control Message	3-27	ADJUSTMENTS	
Sending the Require Service Message	3-27	Introduction	5-1
Sending the Status Byte Message	3-27	Safety Considerations	5-1
Sending the Status Bit Message	3-27	Equipment Required	5-1
Receiving the Abort Message	3-27	Factory-Selected Components	5-1
Switching Characteristics	3-28	Post Repair Adjustments	5-2
Frequency Switching	3-28	Related Adjustments	5-3
Amplitude Switching	3-28	Power Supply Voltage Adjustment	5-4
Modulation Switching	3-28	Reference Voltage Adjustment	5-5
Introduction to the		Audio Oscillator Level Adjustment	5-6
Detailed Operating Instructions	3-30	AM Offset Adjustment	5-7
Amplitude	3-31	715 MHz Sideband Adjustment	5-9
Amplitude Conversion	3-33	Notch Filter Adjustments	5-11
Amplitude Offset	3-35	High Frequency Loop Offset Adjustment	5-14
Amplitude Up/Down	3-36	50 MHz Reference Oscillator Frequency	
Display Amplitude Offset	3-37	Adjustment	5-16
Display	3-38	50 MHz Reference Oscillator Level Adjustment	5-17
Display Sequence	3-39	60 to 110 MHz Oscillator Flatness Adjustment	5-19
Frequency	3-40	690 to 740 MHz IF Compensation Adjustment	5-21
Frequency, Coarse and Fine Tune	3-42	400 MHz Bandpass Filter Adjustment	5-23
Frequency, Phase Up/Down	3-43	Level and ALC Loop Detector Adjustments	5-24
Frequency, Up/Down	3-44	Heterodyne Band 800 MHz	
HP-IB Address Display	3-46	Bandpass Filter Adjustment	5-26
Increment Value Change	3-48	Heterodyne Band Accuracy and	
Increment Value Display	3-50	Flatness Adjustments	5-26.2
Instrument Preset	3-52	AM% and ALC Loop AM Adjustments	5-28
Modulation, AM	3-53	FM Deviation Adjustment	5-30
Modulation, AM Up/Down	3-55	FM Calibration Pretune Adjustment	5-32
Modulation, DC FM	3-57	API 1, 2, 3, and 4 Adjustments	5-34
Modulation, DC FM Up/Down	3-59	Pedestal Adjustment	5-36
Modulation, External Source	3-60	DC FM Adjustment	5-38
Modulation, FM	3-61	FM In-Band Gain Adjustment	5-40
Modulation, FM Up/Down	3-63	Voltage Offset Adjustment	5-42
Modulation, Mixed	3-65	DC FM Offset Adjustment	5-43
Modulation, Off	3-69	Option 001 10 MHz Reference Oscillator	
RF Off/On	3-71	Frequency Adjustment	5-44
Recall	3-72		
Sequence	3-73	Section VI	
Store	3-73	REPLACEABLE PARTS	
Section IV		Introduction	6-1
PERFORMANCE TESTS		Abbreviations	6-1
Introduction	4-1	Replaceable Parts	6-1
Equipment Required	4-1	Factory Selected Parts (*)	6-1
Performance Test Record	4-1	Parts List Updating	6-2
Calibration Cycle	4-2	Illustrated Parts Breakdowns	6-2
Abbreviated Performance Testing	4-2	Ordering Information	6-2
Test Procedures	4-2	Recommended Spares List	6-2
Spectral Purity Tests	4-4		
Output Level Accuracy and Flatness Tests	4-14	Section VII	
Modulation Tests	4-17	INSTRUMENT CHANGES	
Output Leakage Tests	4-29	Introduction	7-1
SWR Test	4-31		

CONTENTS (Cont'd)

VOLUME 2	Page		Page
Section VIII			
SERVICE			
Introduction	8-1	Manual Updating (Manual Changes Supplement)	8-16
Service Sheets	8-1	Etched Circuits (Printed Circuit Boards)	8-16
Principles of Operation	8-1	MOS and CMOS Integrated Circuit Replacement	8-16
Troubleshooting	8-1	Retrofitting Option 001	8-17
Block Diagrams	8-1	Schematic Symbolology and Operating Principles	8-17
Circuit Schematic Diagrams	8-1	Schematic Diagram Notes	8-17
Safety Considerations	8-2	Basic Logic Symbolology	8-17
Before Applying Power	8-2	Gates and Qualifiers	8-17
Warnings and Cautions	8-2	Indicator Symbols	8-21
Special Handling Considerations for Static Sensitive Devices	8-3	Dependency Notation	8-21
General	8-3	Common Control Block	8-21
Description	8-3	Complex Device Symbolology	8-21
Device Classes	8-4	Shift Register	8-21
Component Handling Precautions	8-4	Up/Down Counter	8-21
Component Replacement Procedures	8-4.1	Quad D-Type Latch	8-21
Recommended Test Equipment and Accessories	8-4	Analog Switch	8-21
Service Tools, Aids and Information	8-5	Complex Logic Symbolology and Operating Principles	8-23
Service Tools	8-5	Microprocessor	8-23
Pozidrive Screw Drivers	8-5	Random Access Memory (RAM)	8-23
Tuning Tools	8-5	Read Only Memory (ROM)	8-23
Heat Staking Tool	8-5	Multiple Bus Transceivers	8-24
Parts and Cable Locations	8-6	General Purpose Interface Adapter (GPIA)	8-24
Test Points and Adjustment Locations	8-6	BDC-to-Seven-Segment Latch/Decoder/Driver	8-25
Service Aids on Printed Circuit Boards	8-6	Linear Device Operating Principles	8-25
Other Service Documentation	8-6	Operational Amplifiers	8-25
Troubleshooting	8-6	Comparators	8-26
General	8-6	Service Sheet BD1 Model 8656B Signal Generator Principles of Operation	8-37
Operator Error	8-6	Troubleshooting	8-41
Instrument Out of Specification	8-7	Service Sheet BD2 High Frequency and Output Section Principles of Operation	8-45
Catastrophic Failure	8-7	Troubleshooting	8-49
Strategy	8-7	Service Sheet BD3 Low Frequency and FM Section Principles of Operation	8-53
Overall Troubleshooting (Service Sheet BD1)	8-8	Troubleshooting	8-63
Functional Section Troubleshooting (Service Sheets BD2-BD4)	8-8	Service Sheet BD4 Microprocessor, Keyboard and Display Section Principles of Operation	8-69
Circuit Troubleshooting (Service Sheets 1-25)	8-8	Troubleshooting	8-71
Signature Analysis	8-8	Service Sheet 1 High Frequency Oscillator and IF Principles of Operation	8-73
Additional Information	8-9	Troubleshooting	8-77
Repair	8-9	Service Sheet 2 High Frequency Loop Amplifier and Control Principles of Operation	8-83
Disassembly Procedures	8-9	Troubleshooting	8-87
Front-Panel Removal	8-9	Troubleshooting Using Signature Analysis	8-89
A1 Keyboard and A2 Display Assembly Removal	8-9	Service Sheet 3 Frequency Multiplier Principles of Operation	8-93
Cover Removal, Top and Bottom (Levels 1 and 4 Access)	8-11	Troubleshooting	8-95
A3 Assembly Service Position	8-11		
Level 2 Access	8-11		
A10/A11 Assemblies Service Position	8-11		
Level 3 Access	8-11		
Rear-Panel Removal	8-12		
Fan Shroud Removal	8-12		
Replacement of Key Cap and Pushbutton Switches	8-14		
Key Cap Replacement	8-14		
Switch Replacement	8-14		
Factory-Selected Components (*)	8-15		

CONTENTS (Cont'd)

	Page		Page
Service Sheet 4 Output		Troubleshooting	8-197
Principles of Operation	8-99	Service Sheet 15 Low Frequency Loop In-Band	
Troubleshooting	8-103	Frequency Modulation	
Service Sheet 5 Heterodyne and Output Control		Principles of Operation	8-201
Principles of Operation	8-109	Troubleshooting	8-207
Troubleshooting	8-111	Service Sheet 16 Low Frequency Loop 50 MHz	
Troubleshooting Using Signature Analysis	8-115	Reference Oscillator and Phase Lock Loop	
Service Sheet 6 Modulation Control Latches		Principles of Operation	8-213
and Mode Select		Troubleshooting	8-215
Principles of Operation	8-117	Service Sheet 17 Microprocessor Interrupt	
Troubleshooting	8-121	Processing and Restart	
Troubleshooting Using Signature Analysis	8-123	Principles of Operation	8-217
Service Sheet 7 FM and AM Modulation Control		Troubleshooting Using Signature Analysis	8-223
and RF Amplitude Control		Service Sheet 18 Address Buffering and	
Principles of Operation	8-127	Decoding, Serial I/O and Control	
Troubleshooting	8-131	Principles of Operation	8-227
Service Sheet 8 Attenuator, Attenuator Control		Troubleshooting Using Signature Analysis	8-229
and Reverse Power Protection		Service Sheet 19 Memory	
Principles of Operation	8-135	Principles of Operation	8-233
Troubleshooting	8-137	Troubleshooting	8-235
Troubleshooting Using Signature Analysis	8-141	Service Sheet 20 HP-IB Interface	
Service Sheet 9 Low Frequency Loop Voltage		Principles of Operation	8-241
Controlled Oscillator		Troubleshooting Using Signature Analysis	8-243
Principles of Operation	8-145	Service Sheet 21 Keyboard and Encoder	
Troubleshooting	8-147	Principles of Operation	8-245
Service Sheet 10 Low Frequency Loop Divide-by-2		Troubleshooting	8-247
and Prescaler		Troubleshooting Using Keyboard-Invoked	
Principles of Operation	8-149	Test 4 or Using Signature	
Troubleshooting	8-153	Analysis	8-249
Service Sheet 11 Low Frequency Loop Fractional-N,		Service Sheet 22 Display Control	
Divide-by-N and Digital Timing Logic		Principles of Operation	8-253
Principles of Operation	8-157	Troubleshooting	8-255
Troubleshooting	8-165	Troubleshooting Using Signature Analysis	8-257
Service Sheet 12 Low Frequency Loop Analog		Service Sheet 23 Frequency Displays	
Phase Interpolation (API), Current Sources,		Principles of Operation	8-263
Current Summing and Bias		Troubleshooting	8-265
Principles of Operation	8-171	Troubleshooting Using Signature Analysis	8-267
Troubleshooting	8-175	Service Sheet 24 Amplitude, Modulation and	
Service Sheet 13 Low Frequency Loop Phase		Annunciator Displays	
Detector, Integrator and Sample and Hold		Principles of Operation	8-271
Principles of Operation	8-177	Troubleshooting	8-275
Troubleshooting	8-187	Troubleshooting Using Signature Analysis	8-277
Service Sheet 14 Low Frequency Loop Frequency		Service Sheet 25 Power Supply	
Modulation Calibration		Principles of Operation	8-281
Principles of Operation	8-193	Troubleshooting	8-283

ILLUSTRATIONS

Figure	Page	Figure	Page
2-1. Line Voltage and Fuse Selection	2-2	3-1. Simplified Front-Panel Features	
2-2. Time Base Jumper Location	2-7	and Operation	3-5
2-3. HP-IB Address Switch Location		3-2. Rear-Panel Features	3-8
and Settings	2-7	3-3. Test Setup for Basic Functional Checks	3-11
2-4. Hewlett-Packard Interface Bus Connections	2-8	3-4. FM Functional Check Waveform	3-14