

# Table of Contents

|                                                 |      |
|-------------------------------------------------|------|
| List of Figures .....                           | vii  |
| List of Tables .....                            | viii |
| About This Manual .....                         | ix   |
| Conventions Used in This Manual .....           | x    |
| <br><b>Chapter 1: General Information</b>       |      |
| Product Description .....                       | 1-1  |
| Accessories and Options.....                    | 1-2  |
| Standard Accessories.....                       | 1-2  |
| Optional Accessories.....                       | 1-2  |
| Options.....                                    | 1-2  |
| SAFETY SUMMARY.....                             | 1-3  |
| Terms Used in This Manual.....                  | 1-3  |
| Terms Marked on Equipment.....                  | 1-3  |
| General Safety Information.....                 | 1-3  |
| Optical Input.....                              | 1-3  |
| Power Source.....                               | 1-3  |
| Grounding.....                                  | 1-4  |
| Danger from Loss of Ground.....                 | 1-4  |
| Explosive Atmospheres .....                     | 1-4  |
| Operating Environment.....                      | 1-4  |
| Covers and Panels.....                          | 1-4  |
| Getting Started.....                            | 1-5  |
| OCP5002.....                                    | 1-5  |
| OCP5502.....                                    | 1-6  |
| Voltage Selector.....                           | 1-6  |
| Removing the Blank Plate.....                   | 1-7  |
| Connecting the OCP to Other Equipment.....      | 1-7  |
| <br><b>Chapter 2: Front panel Operation</b>     |      |
| Overview .....                                  | 2-1  |
| Digital Displays.....                           | 2-2  |
| Power Meter.....                                | 2-2  |
| O/E Converter.....                              | 2-2  |
| GPIB.....                                       | 2-3  |
| Input/Output Connectors .....                   | 2-3  |
| Front Panel Functional Reference.....           | 2-4  |
| Digital Displays and Indicators.....            | 2-4  |
| Power Display.....                              | 2-4  |
| mW, $\mu$ W, nW, dBref, and dBm Indicators..... | 2-4  |
| TEMP Indicator.....                             | 2-5  |
| AUTO and MAN Indicators.....                    | 2-5  |
| Wavelength Display .....                        | 2-5  |
| Power Meter Controls .....                      | 2-6  |
| ZERO .....                                      | 2-6  |
| WATTS/dB/dBm.....                               | 2-6  |
| AUTO RANGE.....                                 | 2-7  |

|                                    |      |
|------------------------------------|------|
| VIEW REFERENCE .....               | 2-7  |
| DSPLY→ REFERENCE .....             | 2-7  |
| SET REFERENCE .....                | 2-8  |
| SET WAVELENGTH .....               | 2-8  |
| USER CAL .....                     | 2-10 |
| ENTER .....                        | 2-10 |
| ↑ .....                            | 2-11 |
| ↓ .....                            | 2-11 |
| → .....                            | 2-11 |
| O/E Converter Controls .....       | 2-12 |
| VIEW OFFSET .....                  | 2-12 |
| ↑ .....                            | 2-12 |
| ↓ .....                            | 2-13 |
| CONV FACTOR .....                  | 2-13 |
| DC STABLE .....                    | 2-13 |
| GPIO Controls and Indicators ..... | 2-14 |
| REMOTE .....                       | 2-14 |
| ADDR (SET) .....                   | 2-14 |
| SRQ .....                          | 2-14 |
| Input and Output Connectors .....  | 2-15 |
| OPTICAL INPUT .....                | 2-15 |
| OUTPUT .....                       | 2-15 |
| TEKPROBE® Interface .....          | 2-15 |
| GPIO Interface Connector .....     | 2-15 |
| Front Panel Summary .....          | 2-16 |

### Chapter 3: Typical Applications

|                                                    |      |
|----------------------------------------------------|------|
| Adjusting Eye Pattern While Monitoring Power ..... | 3-2  |
| Required Test Equipment .....                      | 3-2  |
| Procedure .....                                    | 3-3  |
| Verifying Optical Standards .....                  | 3-6  |
| Required Test Equipment .....                      | 3-6  |
| Procedure .....                                    | 3-6  |
| Measuring Optical Reflections .....                | 3-10 |
| Required Test Equipment .....                      | 3-10 |
| Procedure .....                                    | 3-10 |

### Chapter 4: Acceptance Tests

|                                     |     |
|-------------------------------------|-----|
| Required Test Equipment .....       | 4-1 |
| Acceptance Tests .....              | 4-3 |
| Power Meter Zero Test .....         | 4-3 |
| Power Meter Stability .....         | 4-3 |
| Power Meter Absolute Accuracy ..... | 4-4 |
| O/E Converter Output Zero .....     | 4-4 |
| O/E Converter Gain .....            | 4-5 |
| O/E Converter Offset Range .....    | 4-6 |
| O/E Converter Noise .....           | 4-6 |
| Rise Time and Aberrations .....     | 4-7 |
| Output Impedance .....              | 4-9 |

## Chapter 5: Maintenance and Troubleshooting

|                                                         |      |
|---------------------------------------------------------|------|
| Maintenance Procedures.....                             | 5-1  |
| Cleaning the Optical Port.....                          | 5-1  |
| Changing the Optical Port Connectors.....               | 5-3  |
| Removing the OCP5502 Plug-In from the Power Module..... | 5-6  |
| Removing the OCP Side Covers.....                       | 5-6  |
| Replacing the Release Lever Assembly.....               | 5-8  |
| Troubleshooting.....                                    | 5-9  |
| Power-Up Diagnostics.....                               | 5-9  |
| Front Panel Diagnostics.....                            | 5-9  |
| Zero Diagnostics.....                                   | 5-10 |

## Chapter 6: GPIB Commands

|                                         |      |
|-----------------------------------------|------|
| General GPIB Information.....           | 6-1  |
| OCP GPIB Overview.....                  | 6-2  |
| GPIB Command Descriptions.....          | 6-7  |
| All Events - ALLEV?.....                | 6-7  |
| Binary Learn - BLRN?.....               | 6-7  |
| Calibration - *CAL?.....                | 6-8  |
| Clear Status - *CLS.....                | 6-8  |
| Conversion Factor - CONVersion?.....    | 6-8  |
| Set DC Stable Mode - DCStable?.....     | 6-8  |
| Device Event Status Enable - DESE?..... | 6-8  |
| Event Status Enable - *ESE?.....        | 6-9  |
| Event Status Register - *ESR?.....      | 6-9  |
| Get Next Event Code - EVEnt?.....       | 6-10 |
| Get Next Event Message - EVMsg?.....    | 6-10 |
| Event Quantity - EVQty?.....            | 6-10 |
| Response Header - HEADER or HDR.....    | 6-10 |
| Identification Query - *IDN?.....       | 6-11 |
| Set Lambda - LAMbda?.....               | 6-11 |
| Learn - *LRN?.....                      | 6-11 |
| Offset - OFFSet?.....                   | 6-12 |
| Converter Offset Cal - OECAL?.....      | 6-12 |
| Converter Offset Volts - OEVolts?.....  | 6-12 |
| Operation Complete - *OPC?.....         | 6-13 |
| Power-On Status Clear - *PSC?.....      | 6-13 |
| Power - PWR?.....                       | 6-13 |
| Range - RANge?.....                     | 6-14 |
| Reference - REference?.....             | 6-14 |
| Reset - *RST.....                       | 6-15 |
| Service Request Enable - *SRE?.....     | 6-15 |
| Read Status Byte Query - *STB?.....     | 6-15 |
| Temperature Controller - TEMP?.....     | 6-16 |
| Tektronix Probe Interface - TPI?.....   | 6-16 |
| Initiate a New Measurement - TRIG.....  | 6-16 |
| Self-Test Query - *TST?.....            | 6-17 |
| Units - UNItS?.....                     | 6-17 |

|                                            |      |
|--------------------------------------------|------|
| User Calibration Constant - USERcal? ..... | 6-18 |
| Command Header Style - VERBoSe?.....       | 6-18 |
| Wait to Complete - *WAI .....              | 6-18 |
| Wavelength - WAVelength?.....              | 6-18 |
| Wavelength Cal Table - WTBL?.....          | 6-19 |
| Compensate for Dark Currents - ZERo?.....  | 6-19 |
| GPIB Command Examples.....                 | 6-20 |
| Identification Query Example.....          | 6-20 |
| Power Measurement Example.....             | 6-22 |

## **Chapter 7: Specifications**

## **Chapter 8: Replaceable Parts**

## **Appendix A: GPIB Error Codes**

## **Appendix B: Diagnostic Error Codes**

# List of Figures

| Figure                                                       | Page |
|--------------------------------------------------------------|------|
| 1-1. Installing the OCP5002 into the Power Module .....      | 1-5  |
| 1-2. Voltage Selector Assembly.....                          | 1-6  |
| 1-3. Connecting the OCP to Other Equipment.....              | 1-7  |
| 2-1. The OCP Front Panel.....                                | 2-1  |
| 2-2. OCP Front Panel Flow Chart.....                         | 2-16 |
| 3-1. Optical Output vs. Current.....                         | 3-2  |
| 3-2. Equipment Connections for Eye Pattern Test .....        | 3-3  |
| 3-3. Underbiased Eye Pattern .....                           | 3-4  |
| 3-4. Overbiased Eye Pattern.....                             | 3-5  |
| 3-5. Properly Adjusted Eye Pattern.....                      | 3-5  |
| 3-6. Equipment Connections for FDDI Test.....                | 3-7  |
| 3-7. FDDI Waveform Display.....                              | 3-8  |
| 3-8. FDDI Jitter Test Waveform .....                         | 3-8  |
| 3-9. FDDI Mask Test .....                                    | 3-9  |
| 3-10. Equipment Connections for Reflection Test.....         | 3-11 |
| 3-11. Reflection Measurement Display.....                    | 3-12 |
| 4-1. Equipment Connections for Absolute Accuracy Test .....  | 4-4  |
| 4-2. Equipment Connections for O/E Converter Gain Test ..... | 4-5  |
| 4-3. Equipment Connections for Rise Time Measurement.....    | 4-7  |
| 4-4. Integrated Response Curve .....                         | 4-8  |
| 5-1. Removing the Optical Bulkhead Connector .....           | 5-2  |
| 5-2. FC Optical Connector Assembly .....                     | 5-3  |
| 5-3. ST Optical Connector Assembly .....                     | 5-4  |
| 5-4. DIN Optical Connector Assembly.....                     | 5-4  |
| 5-5. SMA Optical Connector Assembly.....                     | 5-5  |
| 5-6. Biconic Optical Connector Assembly.....                 | 5-5  |
| 5-7. Location of the OCP5502 Mounting Screw.....             | 5-7  |
| 5-8. Removal of Latch Knob.....                              | 5-8  |
| 5-9. Location of Front Panel Screws.....                     | 5-9  |
| 5-10. Removal of Retaining Latch .....                       | 5-9  |
| 6-1. OCP GPIB Status Handling Overview.....                  | 6-3  |
| 8-1. Exploded View.....                                      | 8-3  |

## List of Tables

| Table                                             | Page |
|---------------------------------------------------|------|
| 4-1. Required Acceptance Test Equipment.....      | 4-2  |
| 6-1. Supported IEEE Interface Subsets .....       | 6-2  |
| 6-2. Summary of OCP Unique Commands .....         | 6-5  |
| 6-3. Standard Events Register Data .....          | 6-9  |
| 6-4. Cross Reference for Wavelength Stack .....   | 6-11 |
| 6-5. Summary of Range Values.....                 | 6-14 |
| 6-6. Settings After an *RST Command .....         | 6-15 |
| 6-7. Status Byte Register Contents.....           | 6-16 |
| 7-1. O/E Converter Optical Specifications .....   | 7-1  |
| 7-2. O/E Converter Electrical Specifications..... | 7-2  |
| 7-3. Power Meter Specifications.....              | 7-3  |
| 7-4. TEKPROBE® Interface Specifications.....      | 7-4  |
| 7-5. Power Requirement Specifications.....        | 7-4  |
| 7-6. Physical Specifications.....                 | 7-5  |
| 7-7. Environmental Specifications.....            | 7-5  |
| 7-8. Reliability Specifications.....              | 7-7  |
| A-1. GPIB Command Error Codes.....                | A-1  |
| A-2. GPIB Execution Error Codes.....              | A-3  |
| A-3. GPIB Internal Error Codes .....              | A-4  |
| A-4. GPIB System Error Codes.....                 | A-4  |
| A-5. GPIB Miscellaneous Error Codes.....          | A-5  |
| B-1. Diagnostic Error Codes .....                 | B-1  |