

Operating Manual

Digital Communications Analyzer PFA-30

BN 4523/01, series G...

Order No. BN 4523/00.82

Edition 03/11.6.92

Subject to change without notice

Our normal guarantee and delivery terms apply

Printed in the United Kingdom

© Wandel & Goltermann Ltd, 1991

Technical content: Product Marketing Department, WGPlymouth

Editor: Adrian King

Contents

1 Introduction

1.1	Overview	1-1
1.2	Test Modes	1-1
1.2.1	Framed operation	1-1
1.2.2	Unframed operation	1-3
1.2.3	Error injection	1-3
1.2.4	Mux/demux testing mode	1-4
1.3	General Features	1-5
1.3.1	Autoconfigure	1-5
1.3.2	Interface parameters	1-6
1.3.3	Result analysis	1-6
1.3.4	Gelbrich synchronisation method	1-7
1.3.5	Error and alarm indication	1-7
1.3.6	Storage of results and histograms	1-7
1.3.7	Storage of instrument setups	1-7
1.3.8	Printing	1-8
1.3.9	Programmable	1-8
1.3.10	Remote control	1-9
1.3.11	Languages	1-9
1.3.12	Test patterns	1-9
1.4	Interfaces	1-9
1.5	Self test	1-9

2 Preparation for use

2.1	Introduction	2-1
2.2	Important Safety Instructions	2-1
2.3	Power Supplies	2-1
2.3.1	Battery operation	2-1
2.3.2	Low battery indication	2-2
2.3.3	Using the LNT-1 AC Adaptor/Charger	2-2
2.3.4	General safety criteria for batteries	2-2
2.4	Switching on	2-2
2.4.1	Setting the date and time	2-3
2.4.2	Setting the display contrast	2-3
2.4.2	Setting an alternative language	2-3

3 Operation

3.1	Introduction	3-1
3.2	Connections to the Instrument	3-1
3.2.1	G.703 interface tests	3-1
3.2.2	Other interfaces	3-2
3.3	Setting the Instrument Configuration	3-2
3.3.1	Previous configuration	3-2
3.3.2	Stored configuration	3-2
3.3.3	*Auto* function	3-2
3.3.4	New configuration	3-3
3.3.5	Multiplexer and de-multiplexer testing	3-4
3.3.6	Sub-menus on *Setup Menu 3*	3-4
3.3.7	Setting the beeper on/off	3-5
3.3.8	Setting the histogram resolution	3-6
3.3.9	Setting the loudspeaker volume	3-6
3.3.10	Setting the time and date	3-6
3.4	Storing the Instrument Configuration	3-6

Using the Test Memories	3-6
Recalling the demonstration results	3-8
Running a Test	3-8
The "Running" menu pages	3-8
The "Running" results pages	3-8
The "Running" histogram pages	3-9
Injecting errors	3-10
Stopping the test	3-10
Resetting the test	3-11
Displaying the Results of a Completed Test	3-11
Introduction	3-11
Histogram stored with DAYS/HOURS resolution	3-11
Using the time axis cursor on the DAYS histogram page	3-11
Scrolling through the HOURS histogram pages	3-11
Histograms stored with HOURS/MINUTES resolution	3-12
Using the time axis cursor on the HOURS histogram page	3-12
Scrolling through the MINUTES histogram pages	3-12
Channel Status and Words Monitor	3-13
The "Channel Status" page	3-13
The "Words" page	3-13
Level and Frequency Mode	3-13
The "Level & Frequency" page	3-13
Setting the Printer Configuration	3-14
Manually setting the printer configuration	3-14
The Autoprint function	3-14
Printing Out Results	3-15
Numeric results	3-15
Autoprint	3-16
Volume Control	3-16
Remote Control	3-16
Error and Alarm Indication	3-17
Applications	
Introduction	4-1
Framed Monitor	4-1
Framed Generator	4-3
"RX/TX" mode	4-3
"Through" mode	4-4
Unframed Test	4-5
Mux Mode	4-8
Troubleshooting	
Introduction	5-1
Blank Display	5-1
Unable to Run a Test	5-1
Unable to get Printer to Operate	5-1
Test Locked	5-2
Memory Space Limit	5-3
Different Results Obtained with other Instruments	5-4
Apparent Battery Failure	5-4
Index A - Specifications	
Generator	A-1
Receiver	A-2
Display and Printout of Result Parameters	A-3

A.4 General Specifications	A-5
Ordering Information	A-6

Appendix B - Menu

B.1 Switch-on	B-1
B.2 Switch-off	B-1
B.3 "Main Menu" Page	B-1
B.4 "Setup Menu 1" Page	B-2
B.5 "Setup Menu 2" Page	B-4
B.6 "Setup Menu 3" Page	B-5
B.7 "Auto" Function	B-7
B.8 "Results" Pages	B-7
B.9 "Printer Menu" Page	B-9
B.10 "Stores" Page	B-10
B.11 "Test Memory" Page	B-11
B.12 "Self Test"	B-11
B.13 "Running" Pages	B-12
B.14 Menu 1 Sub-menu - "Tx Slots Menu" Page	B-13
B.15 Menu 1 Sub-menu - "Rx Slots (BERT)" Page	B-14
B.16 Menu 3 Sub-menu - "Timer Menu" Page	B-14
B.17 Menu 3 Sub-menu - "Autoprint Menu" Page	B-15
B.18 Menu 3 Sub-menu - "G.821 Menu" Page	B-16
B.19 Menu 3 Sub-menu - "Alarm Display" Page	B-17
B.20 The "Channel Status" Page	B-17
B.21 The "Words" Page	B-18
B.22 The "Level & Frequency" Page	B-18

Appendix C - Results Parameters

C.1 Introduction	C-1
C.2 The "BER Results" Page	C-1
C.3 The "G.821 Results" Page	C-2
C.4 The "Alarm Results" Page	C-4
C.5 The "Frame Results" Page	C-4
C.6 Histograms	C-5
C.7 The "Signalling" Page	C-6

Appendix D - Glossary

Glossary of terms used in this manual	D-1
---------------------------------------	-----

Appendix E - Interface and Frame Structure Details

E.1 V.11 Interface (G.703 Mode)	E-1
E.2 V.24/RS-232 Interface (Printer Mode)	E-1
E.3 V.11 Interface (DTE BERT Mode)	E-2
E.4 V.24/RS-232 (DTE BERT Mode)	E-2
E.5 V.11 Interface (DCE BERT Mode, using cable K 1505)	E-3
E.6 V.24/RS-232 Interface (DCE BERT Mode, using cable K 1512)	E-3
E.7 V.35 Interface (DTE BERT Mode, using cable K 1508 or K 1511)	E-4
E.8 V.35 Interface (DTE BERT Mode, using cable K 1509 or K 1511)	E-4
E.9 V.36/RS-449 Interface (DTE BERT Mode, using cable K 1506)	E-5
E.10 V.36/RS-449 Interface (DCE BERT Mode, using cable K 1507)	E-5
E.11 Frame Structure	E-6

Appendix F - QBF Pattern Coding

Quick Brown Fox pattern sequences in text and hexadecimal	F-1
---	-----